

# NEON SENSOR COMMAND, CONTROL AND CONFIGURATION (C3) DOCUMENT: EDDY COVARIANCE STORAGE EXCHANGE

PREPARED BY	ORGANIZATION	DATE
Hongyan Luo	FIU	Jun 2017
Natchaya Pingintha-Durden	FIU	May 2016
Derek Smith	FIU	Mar 2016

APPROVALS	ORGANIZATION	APPROVAL DATE	
Greg Wirth	CI	06/16/2017	
Laura Leyba-Newton	ENG	06/16/2017	

RELEASED BY	ORGANIZATION	RELEASE DATE
Judy Salazar	СМ	06/28/2017

See configuration management system for approval history.

The National Ecological Observatory Network is a project solely funded by the National Science Foundation and managed under cooperative agreement by Battelle. Any opinions, findings, and conclusions or recommendations expressed in this material are those of the author(s) and do not necessarily reflect the views of the National Science Foundation.



# **Change Record**

REVISION	DATE	ECO #	DESCRIPTION OF CHANGE
А	05/16/2016	ECO-03817	Initial release
В	08/04/2016	ECO-03911	Add gas cylinders and water trays as DGDs in this document
С	12/08/2016	ECO-04291	Update data type for data streams from G2131-I and L2130-I in table 43
D	06/28/2017	ECO-04828	Change 90-vial tray to 12-vial tray, and do some other minor edits



#### **TABLE OF CONTENTS**

1	. DE	SCRIP	PTION1		
	1.1	Pur	Purpose1		
	1.2	Scope1			
2	Re	lated	documents and acronyms5		
	2.1	Арр	blicable Documents		
	2.2	Ref	erence Documents5		
	2.3	Acr	onyms5		
3	S An	alyze	r for CO <sub>2</sub> /H <sub>2</sub> O concentration (DGD CD08340000)6		
	3.1	Intr	roduction6		
	3.2	Ove	erview of Sensor configuration7		
	3.3	Cor	nmand and Control7		
4	An	alyze	r for isotopic CO2 (DGD 0330600000)7		
	4.1	Intr	roduction7		
	4.2	Ove	erview of Sensor configuration8		
	4.3	Cor	nmand and Control10		
	4.3	8.1	Error handling		
	4.3	8.2	Sensor G2131-I controls specification10		
5	5 An	alyze	r for isotopic water (DGD 0328050000)11		
	5.1	Intr	roduction		
	5.2	Ove	erview of Sensor configuration11		
	5.2	2.1	L2130-I analyzer		
	5.2	2.2	A0325 HTC-xt Autosampler14		
	5.2	2.3	A0211 High Precision Vaporizer14		
	5.3	Cor	nmand and Control14		
	5.3	8.1	Error handling14		
	5.3	8.2	Sensor L2130-i controls specification14		
6	б Те	mpera	ature sensor in the hut (DGD 0347780000)16		
	6.1	Intr	roduction16		



6.2	Ove	erview of Sensor configuration	16
6.3	6.3 Command and Control17		
6.	.3.1	Error handling	17
6.	.3.2	Sensor T7610 controls specification	18
7 D	ehumi	difier (NEON P/N: 0347810000, NOT A DGD)	18
7.1	Inti	oduction	18
7.2	Ove	erview of Sensor configuration	19
7.3	Cor	nmand and Control	20
7.	.3.1	Error handling	20
7.	.3.2	Sensor <device> controls specification</device>	20
8 G	ias cyli	nder pressure sensor (DGD CA07140000, CA07150000)	20
8.1	Inti	oduction	20
8.2	Ove	erview of Sensor configuration	21
8.3	Cor	nmand and Control	23
0	.3.1	Error handling	23
8.			
	.3.2	Sensor PX319-3KGI and PX319-100GI controls specification	
8.	.3.2		23
8.	.3.2 Absolut	Sensor PX319-3KGI and PX319-100GI controls specification	23 <b>24</b>
8. <b>9 A</b>	.3.2 I <b>bsolut</b> Intr	Sensor PX319-3KGI and PX319-100GI controls specification	23 <b>24</b> 24
8. <b>9 A</b> 9.1	.3.2 I <b>bsolut</b> Intr Ove	Sensor PX319-3KGI and PX319-100GI controls specification e pressure transducer (DGD CA08830000) oduction	23 <b>24</b> 24 26
8. <b>9 A</b> 9.1 9.2 9.3	.3.2 I <b>bsolut</b> Intr Ove	Sensor PX319-3KGI and PX319-100GI controls specification	23 <b>24</b> 24 26 26
8. <b>9 A</b> 9.1 9.2 9.3 9.3	.3.2 Ibsoluti Inti Ove Cor	Sensor PX319-3KGI and PX319-100GI controls specification e pressure transducer (DGD CA08830000) oduction erview of Sensor configuration nmand and Control	23 <b>24</b> 26 26 26
8. <b>9 A</b> 9.1 9.2 9.3 9.3	.3.2 Intr Ove Cor .3.1	Sensor PX319-3KGI and PX319-100GI controls specification	23 <b>24</b> 26 26 26 27
8. 9 A 9.1 9.2 9.3 9. 9.	.3.2 Intr Ove Cor .3.1 .3.2 Mass	Sensor PX319-3KGI and PX319-100GI controls specification	23 24 26 26 26 27 <b>27</b>
8. 9 A 9.1 9.2 9.3 9. 9. 10	.3.2 Intr Ove .3.1 .3.2 Mass 1 Intr	Sensor PX319-3KGI and PX319-100GI controls specification	23 <b>24</b> 26 26 27 <b>27</b> 27
8. 9 A 9.1 9.2 9.3 9. 9. 10 10.1	.3.2 Intr Ove Cor .3.1 .3.2 Mass 1 Intr 2 Ove	Sensor PX319-3KGI and PX319-100GI controls specification	23 24 26 26 26 27 27 27
8. 9 A 9.1 9.2 9.3 9. 9. 10 10.1 10.2 10.3	.3.2 Intr Ove Cor .3.1 .3.2 Mass 1 Intr 2 Ove	Sensor PX319-3KGI and PX319-100GI controls specification	23 24 26 26 27 27 27 27 28
8. 9 A 9.1 9.2 9.3 9. 9. 10 10.1 10.2 10.3 10.3	.3.2 Intr Ove Cor .3.1 .3.2 Mass 1 Intr 2 Ove 3 Cor	Sensor PX319-3KGI and PX319-100GI controls specification	23 24 26 26 26 27 27 27 27 28 28
8. 9 A 9.1 9.2 9.3 9. 9. 10 10.1 10.2 10.3 10.3	.3.2 Intr Ove Cor .3.1 .3.2 Mass 1 Intr 2 Ove 3 Cor 0.3.1 0.3.2	Sensor PX319-3KGI and PX319-100GI controls specification	23 24 26 26 26 27 27 27 27 28 28 28 28



11.1	L.1	Introduction	29
11.1	L.2	Overview of sensor configuration	29
11.1	L.3	Command and control	29
11.2	Mass	s flow controller for LI840A (DGD 0341570000)	30
11.2	2.1	Introduction	30
11.2	2.2	Overview of sensor configuration	30
11.2	2.3	Command and control	31
12 E	C prof	ile assembly infrastructure (DGD CD06640001, CD06640002, CA10210000)	.31
12.1	Intro	duction of infrastructure	31
12.2	Over	view of assembly configuration EC profile assembly	31
12.2	2.1	Sample Line Pumps and IRGA pump (DGD CD07150000)	32
12.2	2.2	IRGA sample manifold (CD06640001)	34
12.2	2.3	$H_2O$ sample manifold (CD06640001)	35
12.2		Valves to deliver zero air to L2130-I (DGD CD06640001, DGD CD06640002, CA10210000 35	))
12.2	2.5	CO <sub>2</sub> sample manifold (CD06640001)	36
12.2	2.6	Validation Gas Manifold (DGD CD06640001)	37
12.3	Com	mand and Control	38
12.3	8.1	Heaters (No DGD)	38
12.3	3.2	Cycling of Profile Solenoids during sampling mode	40
12.3	3.3	LI840A field calibration and field validation (DGD CD06640001, DGD CD06640002)	42
12.3	3.4	G2131-I and L2130-I Field Validation	45
12.3	8.5	Error handling	48
12.3	8.6	Sensor controls specification	48
13 A	sseml	oly Integration	.49
14 Po	otenti	ial future development	.49
15 A	ppend	dix & bibliography	.50
15.1	EC pi	rofile assembly Schematic	50
15.2	Instr	ument status (INST_STATUS) information	52
15.3	List c	of files in the analyzers that need to be copied and backed up at HQ	54



15.4	G2131-I and L2130-I power start up sequence flow chart	55
15.5	G2131-I and L2130-I power shut down sequence flow chart	56
15.6	List of Level 0 data product	57
15.7	Bibliography	64

#### LIST OF TABLES

Table 1. Sensor configuration settings for LI840A IRGA	7
Table 2. Sensor configuration settings for Picarro G2131-I analyzer	8
Table 3. Truth table for controlling sensor (G2131-I, DGD 0330600000)	10
Table 4. Sensor configuration settings for Picarro L2130-I Analyzer during operation	12
Table 5. High Precision Vaporizer configuration settings	14
Table 6. Truth table for controlling sensor (L2130-I, DGD 0328050000)	15
Table 7. Default sensor configuration settings for the temperature sensor	16
Table 8. Temperature sensor error codes	17
Table 9. Truth table for controlling sensor T7610	18
Table 10. NEON sites that will have a L2130-i	19
Table 11. Default sensor configuration settings for the dehumidifier.	19
Table 12. Default sensor configuration settings for the gas cylinder pressure sensor	23
Table 13. Truth table for controlling sensor PX319-3KGI and PX319-100GI	23
Table 14. Ambient pressure at each NEON site used for control sample line pump	24
Table 15. Default sensor configuration settings for the absolute pressure transducer	26
Table 16. Truth table for controlling sensor ( PX319-030AI).	27
Table 17. Mass flow meter configuration settings	27
Table 18. Truth table for controlling sensor MW-20 SLPM-NEON	28
Table 19. Flow controller (Validation Gas MFC) configuration settings (for validation gases)	29
Table 20. Truth table for controlling sensor (MFC for LI840A validation, DGD 0341500000)	30
Table 21. Mass Flow controller (MFC) configuration settings (for LI840A)	30
Table 22. Truth table for controlling sensor (MFC for LI840A sampling, DGD 0341570000)	31
Table 23. Default configurations for the Pump	32
Table 24. Existing data products that will be used in profile system screened inlet heater command	and
control	33
Table 25. Truth table to control the sample line pumps (DGD CD07150000)	33
Table 26. Configurations for the IRGA sample manifold	34
Table 27. Configurations for the H <sub>2</sub> O Sample manifold	35
Table 28. Configurations for H <sub>2</sub> O Analyzer WLM Purge Valve, H <sub>2</sub> O Analyzer Zero Air Valve, Vaporize	r 3-
way Valve and H <sub>2</sub> O Manifold Zero Air Valve	36
Table 29. Configurations for the Isotopic CO <sub>2</sub> sample manifold	36



Table 30. Default configurations for the Isotopic CO2 Validation Gas Manifold
Table 31. Existing data products that will be used in profile system screened inlet heater command and
control
Table 32. Truth table to control the screened inlet heater (no DGD)*       39
Table 33. Example of one cycle sequence for IRGA Sample Valves* (1 for open, and 0 for closed, assume
8 levels)
Table 34. Example of one cycle sequence for $CO_2$ Sample Valves or $H_2O$ Sample Valves (assume 8 levels).
Table 35. Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during
field calibration of LI840A43
Table 36. Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during
routine field validation of the LI840A IRGA
Table 37. Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during
the monthly 'archive' validation of the LI840A IRGA
Table 38. Cycling sequence for the Val Gas Select valves and the CO <sub>2</sub> Val Gas Valve during routine field
validation of G2131-I
Table 39. Cycling sequence for the Val Gas Select valves and the CO <sub>2</sub> Val Gas Valve during the monthly
'archive' validation of G2131-I
Table 40. Command and control for H <sub>2</sub> O Analyzer WLM Purge Valve, H <sub>2</sub> O Analyzer Zero Air Valve,
Vaporizer 3-way Valve and $H_2O$ Manifold Zero Air Valve during routine field validation of L2130-I (1 =
open valve, 0 = close) valve.)
Table 41. Files in G2130-I analyzers that need to be copied and backed up at HQ
Table 42. Files in L2130-I analyzers that need to be copied and backed up at HQ
Table 43. List of Level 0 data products for Eddy Covariance Storage Exchange Subsystem         57

#### LIST OF FIGURES

Figure 1. Cylinder layout at instrument hut	23
Figure 2. Schematic of the Eddy Covariance Storage Exchange Profile System	51
Figure 3. Flow chart for G2131-I and L2130-I power start up sequence	55
Figure 4. Flow chart for G2131-I and L2130-I power shut down sequence	56



# **1 DESCRIPTION**

Calculation of surface-atmosphere scalar exchange by the aerodynamic or 'eddy flux' approach involves the estimation of two kinds of terms. The first term represents the *aerodynamic fluxes*, both advective and turbulent, and the second term represents the *storage*. At NEON tower sites, the *aerodynamic fluxes* of CO<sub>2</sub> and H<sub>2</sub>O are measured by the Eddy Covariance Turbulent Exchange Assembly, and the *storage term* of CO<sub>2</sub> and H<sub>2</sub>O will be measured by the Eddy Covariance Storage Exchange Assembly (also referred to as EC profile assembly. The term of "EC profile assembly" will be used in this document from here and below).

On the top of the storage term measurements, the profile assembly also measures the stable isotope of  ${}^{13}C$  in CO<sub>2</sub>,  ${}^{18}O$  and  ${}^{2}H$  in water vapor in the atmosphere at each tower measurement level.

The storage term can be determined through  $CO_2$  concentration and  $H_2O$  concentration measurements at different measurement levels using a  $CO_2/H_2O$  Infrared Gas Analyzer (IRGA). The specific sensor used in our design is the LICOR LI840A. Stable isotope measurement will be done using a PICARRO G2131-I Cavity Ring Down Spectrometer (CRDS) for <sup>13</sup>C in CO<sub>2</sub> and a PICARRO L2130-I CRDS for <sup>18</sup>O and <sup>2</sup>H in water vapor. For convenience, we will call them G2131-I analyzer or L2130-I analyzer in the document below. This document describes the configuration, command and control related with these instruments, associated accessories, solenoids, manifolds and pneumatics within the Eddy Covariance Storage Exchange Assembly. See Section 15.1 for the Schematic of the EC profile assembly.

Due to the complexity of the whole EC profile assembly, keeping a copy of the EC profile assembly Schematic (Appendix 15.1) handy will enhance your understanding while reading through this document.

# 1.1 Purpose

This document specifies the command, control, and configuration details for operating the EC Profile Assembly. It includes a detailed discussion of all necessary requirements for operational control parameters, conditions/constraints, set points, and any necessary error handling. All Level 0 Data Products generated by the sensor should be identified. L0 data from the sensor received at HQ are unfiltered and uncorrected data products, further processing will be performed using associated algorithms to produce a QA/QC'd L1 data products in Standard Scientific Units.

# 1.2 Scope

A suite of sensors, solenoids, and manifolds, etc. exist within the EC Profile Assembly. This document is concerned with the operation, configuration, command and control of the sensors, solenoids, manifolds, heater and pneumatics of the assembly.

A complete set of the Level 0 data products generated in this document can be found in appendix 15.6.

The EC Profile Assembly will consist of the following Data Generating Devices (DGD) based on AD [09]:



0330600000	Sensor G2131-I Gas Analyzer for Isotopic $CO_2$ 240VAC, with 125 sccm internal orifice
0328050000	Sensor, L2130-I Analyzer for isotopic water vapor 90 to 240VAC 60HZ
CA07140000	Assembly, Pressure Transducer 0-100psi and Cable Small
CA07150000	Assembly, Pressure Transducer 0-3000psi and Cable Small
0347780000	Remote Thermometer Hygrometer Barometer with PoE
CD06640001	Harness, Grape Digital Out, 8 Solenoid Control
CD06640002	Harness, Grape Digital Out, 4 Solenoid Control
0341500000	Controller, Mass Flow, 5 SLPM, ID EEPROM
0341570000	Controller, Mass Flow, 5 SLPM, Whisper Series, EEPROM
CD08340000	Assembly, IRGA Sensor and EPROM DB9 Serial Adaptor
0341530000	Meter, Mass Flow, 20 SLPM, Whisper Series, ID EEPROM
CA08830000	Assembly, pressure transducer, 0-30 PSI, 4-20MA, enclosure
CD07150000	Assembly, 24VDC Pump and Control
0361660000	Picarro L2130-i tertiary isotopic water standards for field validations
0353710000	Gas Cylinders, High Pressure, Internal Water Volume of 43 liters, with known values of CO2 and Isotopic CO2 to be used for field validations

Further detailed sensor info under each DGD is as following:

- Under DGD 0330600000, *Picarro G2131-I Gas Analyzer for Isotopic* CO<sub>2</sub> (NEON P/N 0330600000). It is used to make measurements of high precision CO<sub>2</sub> concentration, H<sub>2</sub>O concentration and isotopic CO<sub>2</sub> ( $\delta^{13}$ C) for air samples drawn from tower profile measurement levels. The reference document for the Picarro G2131-I Analyzer for Isotopic CO<sub>2</sub> is RD [03].
  - Operating System Software: Windows 7.
  - System Firmware: ver 1.5.0-n
  - o Customized design with a critical orifice to allow 125 sccm flow rate through laser cavity
- Under DGD 0328050000, *Picarro L2130-I Analyzer for Isotopic Water Vapor* (NEON P/N 0328050000). It will be used in the measurements of  $\delta^{18}$ O,  $\delta^2$ H, and H<sub>2</sub>O concentration for air samples drawn from tower profile measurement levels. The reference documents for the Picarro L2130-I Analyzer for Isotopic H<sub>2</sub>O are RD [04] and RD [05].
  - Operating System Software: Windows 7
  - System Firmware: ver 1.5.0-n
  - Other accessories:
    - A0211 Liquid Sample High Precision Vaporizer [NEON P/N: 0300280001]
    - A0325 Auto Sampler (NEON P/N 0328050001)
    - A0912 Switching valve and accompanying software (NEON P/N 0328050002)
- Under DGD CD08340000, LI840A CO<sub>2</sub>/H<sub>2</sub>O gas analyzer: LICOR P/N: LI840A-03 (NEON P/N: 0340570000). It will be used to measure the CO<sub>2</sub> and water vapor (H<sub>2</sub>O) concentration for air



samples drawn from tower profile measurement levels, which will be eventually used to determine the storage term of  $CO_2$  and  $H_2O$ . The reference document is RD [08].

- Equip 2 Swagelok fittings (Union, Bulkhead, SS, 0.25" OD Swagelok Part No.: SS-400-61) at the gas inlet and outlet of the sensor per NEON request.
- Firmware version: 2.1.0
- Power Requirements: Input Voltage 12-30 VDC
- Under DGD 0347780000, Thermometer Hygrometer Barometer in the instrument hut: Comet P/N: T7610. Remote Thermometer Hygrometer Barometer with Ethernet. POE Temp Sensor. NEON P/N: 0347780000
- Under DGD 0341530000, *Mass Flow Meter:* Alicat Scientific P/N: MW-20 SLPM-NEON. Meter, Mass Flow, 20 SLPM, Whisper Series, ID EEPROM, NEON P/N: 0341530000. The reference document for this sensor is RD [06]
- Under DGD 0341570000, *Mass Flow Controller* for Li840A IRGA: Alicat Scientific P/N: MCRW-5 SLPM-DS-NEON. Controller, Mass Flow, 5 SLPM, Whisper Series, EEPROM. NEON P/N: 0341570000. The reference document for this sensor is RD [07]
- Under DGD 0341500000, *Mass Flow Controller* for Validation Gas: Alicat Scientific P/N: MC-5 SLPM-NEON. Controller, Mass Flow, 5 SLPM, ID Eeprom. NEON P/N: 0341500000. The reference document for this sensor is RD [07]
- Under DGD CA07150000, Cylinder Pressure Sensor: Omega Engineering P/N: PX319-3KGI. Transducer, 0-3000 psi Gage Pressure (PT), 3000 psi Gage pressure range, DIN connection style. NEON P/N: 0335480000
- Under DGD CA07140000, *Delivery Pressure Sensor:* Omega Engineering P/N: PX319-100GI. Transducer, 0-100 psi Gage Pressure (PT), 100 psi Gage pressure range, DIN connection style. NEON P/N: 0335490000
- Under DGD CA08830000, Inlet Pressure Sensor: Omega Engineering P/N: PX319-030AI. 0-30 psi Absolute Pressure Transducer (PT) 30 psi absolute pressure range, DIN connection style. NEON P/N: 0335460000
- Under DGD CD07150000, Sampling line vacuum pump, Gast Manufacturing, Inc. P/N: 2032-101-G644. Pump, Rotary Vane Vacuum, 24V DC Brushless, 7.2 Amp, 3000 RPM, 0.13 HP, 0.10 KW, 9 Lbs. NEON P/N: 0334770000

Other important parts:

- Solenoid Valve: Components for Automation P/N: C9-211N105-41. Solenoid, 2-Way 24VDC, .125 inch NPT Stainless Steel, .0945 inch Orifice, Normally Closed. NEON P/N: 0309720000
- *Dehumidifier in the instrument hut:* General Electric P/N: ADEL50LR. Dehumidifier, 23 5/8 x 15 3/8 x 11 inches. NEON P/N: 0347810000



Title: NEON Sensor Command, Control and Confige Storage Exchange	ensor Command, Control and Configuration (C3) Document: Eddy Covariance Date: 06/28/2017		
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D	1

This document specifies the command, control, and configuration that are needed for operating these sensors and accessories. It does not provide implementation details, except for cases where these stem directly from the sensor conditions as described here.



#### 2 RELATED DOCUMENTS AND ACRONYMS

#### 2.1 Applicable Documents

AD [01]	NEON.DOC.000001	NEON Observatory Design (NOD) Requirements
AD [02]	NEON.DOC.000291	NEON Configured Sensor List
AD [03]	NEON.DOC.005003	NEON Scientific Data Products Catalog
AD [04]	NEON.DOC.005005	NEON Level 0 Data Products Catalog
AD [05]	NEON.DOC.002058	NEON Eddy Covariance Storage Exchange Assembly SOP [To be writen]
AD [06]	NEON.DOC.000822	NEON Eddy Covariance Storage Exchange Assembly ATBD [ To be writen]
AD [07]	NEON.DOC.002422	Isotopic Water Calibration Fixture Manual L1W200
AD [08]	NEON.DOC.003565	Hut Gas Cylinder Configuration
AD [09]	NEON.DOC.001104	Data Generating Device (DGD) List and Hierarchies

#### 2.2 Reference Documents

RD [01]	NEON.DOC.000008 NEON Acronym List		
RD [02]	NEON.DOC.000243 NEON Glossary of Terms		
RD [03]	Picarro G2131-I Analyzer for Isotopic CO <sub>2</sub> - User's Guide Rev 03/06/12. Picarro, Inc. 3105 Patrick		
	Henry Dr. Santa Clara California, 95054 USA.		
RD [04]	Installation: L2130-I or L2120-i Analyzer and its Peripherals - User's Manual. Revision B, 8-7-2012.		
	Picarro, Inc. 3105 Patrick Henry Dr. Santa Clara California, 95054 USA		
RD [05]	Operation, Data Analysis, Maintenance, Troubleshooting   L2130-I or L2120-i analyzer and its		
	Peripherals User's Manual. Revision 8-7-2012. Picarro, Inc. 3105 Patrick Henry Dr. Santa Clara		
	California, 95054 USA		
RD [06]	Precision Gas Mass Flow Meters Operating Manual. 1/10/2014 Rev. 28. DOC-ALIMAN16. Alicat		
	Scientific. 7641 N Business Park Drive, Tucson, AZ 85743 USA		
RD [07]	Precision Gas Mass Flow Controller Operating Manual. 09/18/2013 Rev. 29. DOC-ALIMAN16C.		
	Alicat Scientific. 7641 N Business Park Drive, Tucson, AZ 85743 USA		
RD [08]	LI-840A CO <sub>2</sub> /H <sub>2</sub> O gas analyzer instruction manual. Jan 2011. Publication Number 984-10690. LI-		
	COR, Inc. • 4421 Superior Street • Lincoln, Nebraska 68504 USA		

#### 2.3 Acronyms

Acronym	Explanation
ATBD	Algorithm Theoretical Basis Document
C <sup>3</sup>	Command, Control, and Configuration Document
SOP	Standard Operating Procedures
QA/QC	Quality Assurance/Quality Control
TIS	Terrestrial Instrument System
LO	Level 0



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

L1	Level 1
ENG	NEON Engineering group
CI	NEON Cyberinfrastructure group
DPS	NEON Data Products group
CVAL	NEON Calibration, Validation, and Audit Laboratory
P/N	Part Number
DGD	Data Generate Device
HQ	Header quarter
IRGA	Infrared Gas Analyzer
CRDS	Cavity Ringdown Spectrometer
WLM	wave length monitor
MFC	Mass flow controller
MFM	Mass flow meter

# 3 ANALYZER FOR CO<sub>2</sub>/H<sub>2</sub>O CONCENTRATION (DGD CD08340000)

#### 3.1 Introduction

The LI840A-03 is used for the measurement of CO<sub>2</sub> concentration and H<sub>2</sub>O concentration of a vertical profile of a tower at NEON tower sites. It is a modified LI-840A sensor equipped with 2 Swagelok fittings (Union, Bulkhead, SS, 0.25" OD Swagelok Part No.: SS-400-61) at the gas inlet and outlet of the sensor per NEON request. Its functionality is identical to standard LI840A IRGA, referred to as LI840A throughout the document. One LI840A IRGA will be deployed at each of NEON terrestrial sites.

Measurements made by the LI840A will be switched between sampling mode and field validation mode at scheduled time periods. During sampling mode, the analyzer will measure air samples from different measurement levels on the tower. During the routine field validation, the analyzer will cease measuring the air samples from the tower levels, and measure known CO<sub>2</sub> gas transfer standards (prepared by CVAL).

The configuration, command and control for the IRGA during sampling mode are described below in section 3.2. The related  $CO_2/H_2O$  data products are listed in tables in section 3.2 below. The configuration, command and control related to the field calibration and field validation for the IRGA will be described in Section 12.3.3 in this document. The gas handling during sampling mode and validation mode will be also described in Section 12.2 of this document.

Digital signals from the IRGA will be collected by the data acquisition system (DAS) using RS232 communication.

Some descriptions in this document may be more appropriate for SOP documents. But given the complexity of this profile assembly, leaving them in this C3 document will enhance the reader's understanding of the design and context.



#### **3.2** Overview of Sensor configuration

Configuration assumptions: CVAL will perform the initial lab calibration and determine calibration coefficients for each LI840A IRGA prior to field deployment, and annually after deployment

Data generated by the LI840A will be streamed to HQ. See sensor configuration settings in Table 1.

All data output from the LI840A should be unfiltered and uncorrected beyond the initial preprocessing by the LI840A IRGA. A description of the working principles and calculations are presented in the associated ATBD (AD[06]).

#### Table 1. Sensor configuration settings for LI840A IRGA

Parameter	Default Setting
Filtering/averaging	1 s
External vacuum pump	On
Pressure compensation	On
Data output rate	1 Hz

L0 data from the LI840A IRGA that will be streamed back to HQ at 1Hz (DGD CD08340000) can be found at appendix 15.6.

#### 3.3 Command and Control

There is no command and control for the LI840A sensor.

# 4 ANALYZER FOR ISOTOPIC CO<sub>2</sub> (DGD 0330600000)

#### 4.1 Introduction

The PICARRO G2131-I analyzer is the sensor selected to measure the high precision CO<sub>2</sub> concentration,  $\delta^{13}$ C in CO<sub>2</sub>, and H<sub>2</sub>O concentration in the atmosphere at different tower profile measurement levels. One G2131-I analyzer will be deployed at each of NEON terrestrial sites.

Measurements made by the G2131-I analyzer will be switched between sampling mode and field validation mode at scheduled time periods. During sampling mode, the analyzer will measure air samples from different measurement levels on the tower. During the routine field validation, the analyzer will cease measuring the air samples from the tower, and measure the known CO<sub>2</sub> gas transfer standards (including known  $\delta^{13}$ C in CO<sub>2</sub>, prepared by CVAL).

Section 4.2 of this document describes the configuration, command and control for the analyzer during sampling mode. The related isotopic CO<sub>2</sub> data products can be found in section 4.2 below. The configuration, command and



control related to the field validation for analyzer will be described in Section 12.3.4 in this document. The gas handling during sampling mode and validation mode will be also described in Section 12.2 of this document.

The G2131-I analyzer has an on-board computer. Selected digital signals from the analyzer will be streamed through an Ethernet to CI and also saved on this computer. **This computer should be configured to synchronize timestamp using Location Controller (LC) as time server at that site.** 

#### 4.2 Overview of Sensor configuration

Configuration assumptions: Cal/Val will determine and preset the initial calibration coefficients for each G2131-I sensor prior to field deployment and it shall never be adjusted in the field. Annual calibration will be performed by CVAL at headquarters.

When the analyzer is powered on, the GUI (Graphical User Interface) for the analyzer will start automatically and appear on the computer monitor. **The analyzer automatically records all data and saves ASCII-format and HD5 format text output files in its onboard computer**. Subsets of these data streams and files can be streamed back to NEON headquarters or collected periodically (see Table 4).

All data related to the isotopic CO<sub>2</sub> analyzer should be unfiltered and uncorrected beyond the initial preprocessing by the Picarro G2131-I Analyzer for Isotopic CO<sub>2</sub>. A description of the working principles and calculations are presented in the associated ATBD (AD[06]).

Parameter		Default Setting
External vacuum pump		On
G2131-I	Computer timestamp	Synchronize to LC time stamp
computer	Picarro Mode Switcher\Select measurement mode	iCO2-CH4
setting and GUI	Settings menu\GUI Mode	Standard
setting	Desktop\Picarro Utilities\ Setup Tool\Data Logger\ Data Columns	All parameters shall remain selected
	Desktop\Picarro Utilities\ Setup Tool\Data Logger\Hours of each log file	24 hours
	Desktop\Picarro Utilities\ Setup Tool\Data Logger\Enable Mailbox Archiving	No
	Desktop\Picarro Utilities\ Setup Tool\Data Logger\Archived Directory Structure	YEAR/MONTH/DAY
	Desktop\Picarro Utilities\ Setup Tool\Data Logger\Total User Log Storage Size (GB)	30
	Desktop\Picarro Utilities\ Setup Tool\Data Logger\Mode	iCO <sub>2</sub>
	Desktop\Picarro Utilities\ Setup Tool\Port Manager\Data Streaming	COM1
	Desktop\Picarro Utilities\ Setup Tool\ Port Manager (Valve Sequencer MPV)	NA; Default value is COM2
	Desktop\Picarro Utilities\ Setup Tool\Port Manager\Commend Interface	ТСР
	Desktop\Picarro Utilities\ Setup Tool\Port Manager\Mode	iCO <sub>2</sub>
	Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Use SSL	NO
	Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Use Authentication	NO
	Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Server	NA
	Desktop\Picarro Utilities\ Setup Tool\Data Delivery\User Name	NA
	Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Password	NA

 Table 2. Sensor configuration settings for Picarro G2131-I analyzer.



Desktop\Picarro Utilities\ Setup Tool\Data Delivery\From	NA
Desktop\Picarro Utilities\ Setup Tool\Data Delivery\To	NA
Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Subject	NA
Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Data Directory	NA
Desktop\Picarro Utilities\ Setup Tool\Data Delivery\Mode	iCO <sub>2</sub>
Desktop\Picarro Utilities\ Setup Tool\GUI Properties\Number of Graphs	4
Desktop\Picarro Utilities\ Setup Tool\GUI Properties\Enable Control of Valve	NA; Valve sequences will be
Sequencer	controlled by the DAS location
	controller: As a default this box is
	grayed out and contains "Yes"
Desktop\Picarro Utilities\ Setup Tool\GUI Properties\Mode	iCO <sub>2</sub>
Desktop\Picarro Utilities\ Setup Tool\Command Interface\Output Data Source	DataLog_User
Desktop\Picarro Utilities\ Setup Tool\Command Interface\Output data columns	Select columns according to the L0
	data product list below.
Desktop\Picarro Utilities\ Setup Tool\Command Interface\Mode	iCO <sub>2</sub>
Desktop\Picarro Utilities\ Setup Tool\Data streaming\Data Stream Source	DataLog_User
Desktop\Picarro Utilities\ Setup Tool\Data streaming\Data Stream Columns	Select columns according to the L0
	data product list below.
Desktop\Picarro Utilities\ Setup Tool\Data streaming\Mode	iCO <sub>2</sub>
Desktop\Picarro Utilities\ Setup Tool\Electrical Interface	Not Available
GUI panel\Settings menu\Change GUI mode from standard to service	Standard
GUI panel\View menu\(Lock/unlock time axis)	Unlocked
GUI panel\View menu\(Show/hide statistics)	Hide
GUI panel\View menu\(Show/hide instrument status)	Hide
Valve sequencer software	NA; Valve sequences will be
	controlled by the DAS location
	controller
Isotopic $CO_2$ measurements: Acquisition rate	~1 Hz

L0 data products from the G2131-I will be collected at the acquisition frequency of ~ 1Hz ( DGD 0330600000) and streamed back to HQ. The L0 data product list can be found in Appendix 15.6.

There are also some folders and files in the G2131-I computer that contain useful info for problem diagnosis, and future data reprocessing. They should be copied periodically and sent back to CI for archive before these files are overwritten by new files. These folders and files are:

C:\userdata\

- C:\Picarro\G2000\AppConfig\; (all directories, not just Config) Will be static except for updates.
- C:\Picarro\G2000\Log\Archive\DataLog\_Private\
- C:\Picarro\G2000\Log\Archive\EventLogs\
- C:\Picarro\G2000\Log\Archive\RDF\
- C:\Picarro\G2000\Log\Archive \WBCAL\

C:\Picarro\G2000\InstrConfig\Calibration\InstrCal ;(Will be static except for updates).

The data streams that will be delivered back to HQ during sampling mode and during instrument validation mode will be identical.



Requirement: If there is an interruption in measurement (e.g., due to power failure or in other unforeseen circumstances), the sensor shall be automatically returned back to the default settings that are pre-configured by CVAL when the measurement resumes.

# 4.3 Command and Control

#### 4.3.1 Error handling

Instrument status (INST\_STATUS) outputted from the analyzer will be used for later data QA/QC, but will not be used to conduct any command and control. The instrument status can be found in the Appendix 15.2.

#### 4.3.2 Sensor G2131-I controls specification

Human communication with the Picarro G2131-I Analyzer for Isotopic  $CO_2$  will be done through the KVM (keyboard, video and mouse). Additionally, the Picarro G2131-I Analyzer for Isotopic  $CO_2$  requires an external vacuum pump for operation, which comes with analyzer package.

Startup sequence (See flow chart in appendix 15.4 for more details):

- The PICARRO external vacuum pump of the analyzer shall be turned on prior to the analyzer itself. The external vacuum pump shall remain on at all times while the Picarro G2131-I Analyzer for Isotopic CO<sub>2</sub> is powered on.
- Because warming the instrument will take a long time, no data within 12 hours after instrument power up should be used for scientific analysis. A data flag should be generated at HQ and described in the associated ATBD document.

Shut down sequence (This shut down procedure shall be an automated process. See flow chart in appendix 15.5 for more details):

- During a power failure,
  - a. While supported by UPS power systems, 5 minutes prior to the Picarro G2131-I Analyzer shut down a command is issued by DAS, and a flow of clean dry gas (i.e. < 1000 ppm water concentration at 2.5 psig) should run through the instrument cavity to avoid condensation.
  - b. After 5 minutes, the DAS issues a command to shut down the analyzer properly, and then shut down the dry gas flow.
  - c. The external pump should be turned off 30 seconds after the instrument powers off.

Because dry air runs through the analyzer cavity for 5 min prior to shut down command being issued, and because it will take about 5 min for the analyzer to fully turn off, no data within 10 minutes prior to full turn off should be used for scientific analysis. A data flag should be generated at HQ and describe in the associated ATBD document.

Table 3. Truth table for controlling sensor (G2131-I, DGD 0330600000)Page 10 of 64



Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Collecting isotopic CO <sub>2</sub> data	Prior to turning on analyzer	Turn external vacuum pump on	NA;
Suspending collection of isotopic CO <sub>2</sub> data and shut down	Power failure	Run clean dry gas through instrument cavity for 5 minutes, turn off the analyzer properly, and turn off the dry gas; after 30 s of the instrument power off, turn external pumps off.	NA;

# 5 ANALYZER FOR ISOTOPIC WATER (DGD 0328050000)

#### 5.1 Introduction

The PICARRO L2130-I is the sensor selected to measure the water vapor (referred to as H<sub>2</sub>O below) concentration,  $\delta^{18}$ O and  $\delta^{2}$ H of water vapor in the atmosphere at different tower profile measurement levels, which varies from 4 to 8 levels at different NEON sites. 21 L2130-I units will be deployed at 20 NEON core sites and one relocatable site (D18 Barrow).

Section 5 of this document describes the configuration, command and control related to the tower profile measurements of H<sub>2</sub>O concentration,  $\delta^{18}$ O and  $\delta^{2}$ H. Measurements made by the L2130-I will be switched between sampling mode and field validation mode at scheduled time periods. During sampling mode, the analyzer will measure air sampled from different tower levels. During the routine field validation, the Picarro analyzer will stop measuring the atmospheric water vapor from the tower profiles, and measure liquid water standards (NEON Tertiary Low, Mid, and High standards, prepared by CVAL) using the autosampler and vaporizer.

Section 5 of this document describes the configuration, command and control on the analyzer during sampling mode and validation mode. Gas handling during sampling mode and validation mode is described in Section 12.2 of this document.

The L2130-I analyzer has an on-board computer. Selected digital signals from the analyzer will be streamed via Ethernet to CI at Headquarters and also saved in this computer. This computer should be configured to synchronize timestamp using Location Controller (LC) as time server at that site.

#### 5.2 Overview of Sensor configuration

#### 5.2.1 L2130-I analyzer

Assumptions:



- 1. CVAL will determine and preset calibration coefficients in the onboard computer for each L2130-I sensor prior to the field deployment, which shall never be adjusted during field operations.
- The Job and Method settings in the control GUI to operate the autosampler and vaporizer during instrument field validation are preset by CVAL in the onboard computer and described in SOPs (AD [05]) prior to field deployment. Field adjustment of the Job and Method shall be done according to field training materials (to be written by SIV team and FOPS team).
- 3. Water standards used in the instrument field validation will be prepared by CVAL.

When the analyzer power is turned on, the analyzer will automatically start, and the GUI (Graphical User Interface) for the analyzer software will appear on the monitor. The analyzer automatically records all data and saves ASCII-format and HD5 format text output files in the onboard computer. Subsets of these data streams and files can be streamed back to NEON headquarters or collected periodically (see Table7).

All data related to the isotopic H<sub>2</sub>O analyzer shall be unfiltered and uncorrected beyond the initial preprocessing by the Picarro L2130-I Analyzer for Isotopic H<sub>2</sub>O. A description of the calculations performed by the Picarro L2130-I Analyzer is presented in the associated ATBD (AD [06]).

Parameter		Default Setting
Regulator at the zero air cylinder\Valve		ON
Regulator at the zero air cylinder/delivery Pressure		2.5 ± 0.5 psig (17.24±3.45 kPa)
External va	cuum pumps (analyzer)	ON
Picarro L21	30-I Analyzer	ON
Vaporizer F	ront display	110 °C
External va	cuum pumps (vaporizer)	
Acquisition	rate	~1 Hz
L2130-I	Computer timestamp	Synchronize to LC time stamp
computer	Picarro coordinator launcher\ Select Coordinator	Dual Liquid/Vapor
setting	Picarro Mode Switcher	iH <sub>2</sub> O Air
and GUI setting	GUI\Setting\Change GUI Mode from Standard to Service	Standard
000000	GUI\View\Lock\Unlock time axis when zoomed	Lock
	GUI\View\Show\hide statistics	Hide
	GUI\View\Show\hide instrument status	show
	GUI\View\Tools\Show\Hide Valve Sequencer GUI	NA
	GUI\Help Menu	NA
	Desktop\Picarro Utilities\Setup Tool \Data Logger\Data Columns (DataLog_User)	Select all parameters
	Desktop\Picarro Utilities\Setup Tool \Data Logger\Hours of Each Log File (0.01~24)	24 hours
	Desktop\Picarro Utilities\Setup Tool \Data Logger\Enable Mail Archiving	NO
	Desktop\Picarro Utilities\Setup Tool \Data Logger\Archived Directory Structure	YEAR/MONTH/DAY
	Desktop\Picarro Utilities\Setup Tool \Data Logger\Total User Log Storage Size (GB)	30

Table 4. Sensor configuration settings for Picarro L2130-I Analyzer during operation



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465 Author: H. Luo/N. Durden		Revision: D

Desktop\Picarro Utilities\Setup Tool \Data Logger\Mode	iH <sub>2</sub> O Air
Desktop\Picarro Utilities\Setup Tool \Port Manager\Data Streaming	Off
Desktop\Picarro Utilities\Setup Tool \Port Manager\Valve Sequencer MPV	N/A (default setting is COM2)
Desktop\Picarro Utilities\Setup Tool \Port Manager\Command Interface	ТСР
Desktop\Picarro Utilities\Setup Tool \Port Manager\Coordinator (Autosampler)	COM1
Desktop/Picarro Utilities/Setup Tool \Data Delivery Setup\Use SSL	NO
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\Use Authentication	NO
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\Server	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\User Name	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\Password	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\From	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\To	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\Subject	NA
Desktop\Picarro Utilities\Setup Tool \Data Delivery Setup\Data Directory	NA (Default is C:/Picarro/G2000/Log/Archive/ Datalog_Mailbox\)
Desktop\Picarro Utilities\Setup Tool \GUI Properties\Number of Graphs	4
Desktop\Picarro Utilities\Setup Tool \GUI Properties\Enable Control of Valve Sequencer	NA if Valve sequences is controlled by the DAS location controller: As a default this box is grayed out and contains "No"
Desktop\Picarro Utilities\Setup Tool \Command Interface\Output Data Source	NA (Default is C:\Userdata\DataLog_User\)
Desktop\Picarro Utilities\Setup Tool \Command Interface\Output Data Columns	Select columns according to the L0 data product list below.
Desktop\Picarro Utilities\Setup Tool \Data Streaming\Data Stream Source	NA (default is C:\Userdata\DataLog_User\)
Desktop\Picarro Utilities\Setup Tool \Data Streaming\Data Stream	Select columns according to

L0 data products from the L2130-I will be collected at acquisition rate of ~1 Hz (DGD 0328050000) and streamed back to HQ. A L0 data products list can be found in Appendix 15.6.

L0 data for the water standards and associated uncertainty (DGD: 0361660000 for the tray with 12 vials) will be extracted from a CVAL XML file. They can be found in Appendix 15.6. The tray with 12 vials is for 4-week's supplies.

There are also some folders and files in the L2130-I computer that contain useful information for problem diagnosis, and future data reprocessing. They should be copied periodically and sent back to CI for archive. These folders and files are:

C:\userdata\ C:\isotopedata\



C:\Picarro\G2000\AppConfig\; (copy all directories, not just Config subdirectory. Will be static except for updates.)

C:\Picarro\G2000\Log\Archive\DataLog\_Private\ C:\Picarro\G2000\Log\Archive\EventLogs\ C:\Picarro\G2000\Log\Archive\RDF\ C:\Picarro\G2000\Log\Archive \WBCAL\ C:\Picarro\G2000\InstrConfig\Calibration\InstrCal ;(Will be static except for updates).

REQ: If there is an interruption in measurement (e.g., due to power failure or in other unforeseen circumstances), the sensor shall be automatically returned back to the default settings that haves been preconfigured by CVAL when the measurement resumes.

# 5.2.2 A0325 HTC-xt Autosampler

The autosampler will be used only in the field validation mode. And the analyzer's coordinator's GUI (which controls the autosampler) **needs to be restarted manually every four weeks for 12-vial tray.** 

#### 5.2.3 A0211 High Precision Vaporizer

The Vaporizer will be used only in the field validation mode. Sensor configuration settings are shown in the table below.

Parameter	Default Setting	
Vaporizer Temperature	110 °C	
External vacuum pumps (vaporizer)	ON	
Raw data measurements	None	

#### **Table 5.** High Precision Vaporizer configuration settings

#### 5.3 Command and Control

#### 5.3.1 Error handling

Instrument status (INST\_STATUS) outputted from the analyzer will be used for later data QA/QC, but will not be used to conduct any command and control. The instrument status can be found in the Appendix 15.2.

# 5.3.2 Sensor L2130-i controls specification

The interface for the Picarro L2130-I Analyzer for Isotopic H<sub>2</sub>O will be through the KVM (keyboard, video and mouse). Additionally, the Picarro L2130-I Analyzer for Isotopic H<sub>2</sub>O requires an external vacuum pump for operation. Vaporizer also requires an external vacuum pump for operation.

Startup sequence (See flow chart in appendix 15.4 for more details):

Page **14** of **64** 



- Assume the compressed gas cylinder valve of zero air has been open and adjusted the delivery pressure to 2.5 ± 0.5 psig (17.24±3.45 kPa)
- Power on both external pumps for analyzer and vaporizer, respectively. The external vacuum pump of analyzer should remain on at all times while the Picarro L2130-I Analyzer is powered on.
- Power on autosampler.
- Power on the vaporizer.
- Power on L2130-I analyzer. GUI will run automatically.

Because the instrument's warm up takes a long time, no data within 12 hours after instrument power up should be used for scientific analysis. A data flag should be generated at HQ and described in the associated ATBD document.

Shut down sequence (This shut down procedure shall be an automated process. See flow chart in appendix 15.5 for more details):

- In response to a power failure,
  - a. While supported by UPS power systems, 5 minutes prior to the Picarro L2130-I Analyzer shut down command being issued by DAS, a flow of clean dry gas (i.e. < 1000 ppm water concentration at 2.5 psig) should run through the instrument cavity to avoid condensation.
  - b. After 5 minutes, the DAS issues a command to shut down the analyzer properly, then shut down the dry gas, then shut down the vaporizer and autosampler
  - c. The external pump should be turned off 30 seconds after the instrument is powered off.

Because the dry air runs through analyzer cavity for 5 min prior to shut down command being issued, and because it will take about 5 min for the analyzer to fully turn off, no data within 10 min prior to the system being fully turned off should be used for science analysis. A data flag should be generated at HQ and describe in the associated ATBD document.

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Collecting isotopic H <sub>2</sub> O data	Prior to turning on analyzer	Turn L2130-I external vacuum pump on	NA; The external vacuum pump does not generate a data stream or flag.
Suspending collection of isotopic H <sub>2</sub> O data and shut down	Power failure	Run clean dry gas through instrument cavity for 5 minutes, turn off the analyzer properly, turn off the dry gas, turn off the vaporizer and autosampler; after30 s of the instrument power off, turn the L2130-I external pumps off.	NA;



# 6 TEMPERATURE SENSOR IN THE HUT (DGD 0347780000)

#### 6.1 Introduction

Because of the dependency of the LI840A on ambient temperature variation, a temperature sensor (Comet T7610 Thermometer Hygrometer Barometer) will be added within 50 cm of the LI840A to monitor the ambient temperature variation. This temperature will be used in future data flagging. The data collected during the time periods of temperature variation > 10 °C over one hour should be flagged due to the possibility of LI840A drift over the requirement of 0.4 ppm for CO<sub>2</sub>. This temperature sensor is a smart sensor and can output temperature, humidity and pressure readings.

When the ambient humidity is high (>30, 000 ppmv), moisture could interfere with the performance of the L2130-I. The humidity output from this sensor can also be used to flag L2130-I data during later data processing, which will be described in the associated ATBD.

The humidity measurement displayed on this sensor's screen can also be used to guide field technicians to adjust the dehumidifier settings to below 30,000ppmv.

Digital signals from the temperature sensor will be collected by the DAS using Ethernet protocols.

#### 6.2 Overview of Sensor configuration

The temperature, barometric pressure, humidity, and one computed value can be displayed on the LCD display or can be read via an Ethernet connection. The options of the computed quantities include: dew point temperature, absolute humidity, specific humidity, mixing ratio and specific enthalpy. We select mixing ratio as this computed value output.

For display, set this temperature sensor to:

- a. Enable LCD
- b. Show Temperature
- c. Show Relative Humidity
- d. Show computed value
- e. Show atmospheric pressure

For the unit of each measurement, set it to:

- a. Temperature: °C
- b. Computed value: Mixing ratio
- c. Atmospheric pressure: kPa

**Table 7.** Default sensor configuration settings for the temperature sensor.

Parameter	Setting
Display	Enable LCD



	Show Temperature
	Show Relative Humidity
	Show computed value
	Show atmospheric pressure
	Temperature: °C
Units	Mixing ratio (Computed value): g/kg
	Atmospheric pressure: kPa
Default pressure	1013 hPa
Atmospheric pressure offset	0.0 hPa

#### Note:

The mixing ratio above is the mass mixing ratio (water vapor (g)/dry air (kg)), not the ppmv mixing ratio. PICCARO suggested < 3% (or 30,000 ppm) water vapor by volume (water vapor to dry air) as a recommended threshold for operating the WLM purge in moist environments. To leave some safety margin, we suggest adjusting the dehumidifier in the hut to achieve the cutoff threshold at **25,000 ppmv** for the PICARRO operating environment. The conversion of mixing ratio from g/kg to ppmv is (g/kg readings) \*[dry air molecular weight (g)/water molecular weight (g)]\*1000\*[atmospheric pressure readings (kPa)/103.325 kPa]. Field technicians should use this info to set the dehumidifier to achieve <25,000 ppmv humidity.

L0 data from the temperature sensor that will be streamed back to HQ at 1Hz (DGD 0347780000) and can be found in Appendix 15.6

# 6.3 Command and Control

There is no command and control on temperature sensors themselves.

#### 6.3.1 Error handling

When error events occur, the sensor LCD will show one of the error codes in the table below, and an error code of -9999 will be output to the location controller, and a trouble ticket should be generated and sent to field technician.

Error 0	Err0	Internal memory CRC error. In this state device doesn't work. This is a critical error, contact the distributor.
Error 1	Err1	Measured or computed quantity is over the upper limit. Error code 9999. This state appears in case of: - Measured temperature is higher than approximately +600°C (i.e. high non-measurable resistance of temperature sensor, probably open circuit)
		<ul> <li>Relative humidity is higher than 100%RH (i.e. damaged humidity sensor or humidity calculation is not possible due to temperature error)</li> <li>Unable to calculate computed quantity (temperature or humidity measurement error)</li> </ul>

#### Table 8. Temperature sensor error codes



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

Error 2	Err2	<ul> <li>Measured or computed quantity is under lower limit or is error in pressure measuring. Error code - 9999. This state appears in case of:</li> <li>Measured temperature is lower than approximately -210°C (i.e. resistance is too small, probably short circuit)</li> <li>Relative humidity is lover than 0%RH (i.e. damaged humidity sensor or humidity calculation is not possible due to temperature error)</li> <li>Measured atmospheric pressure with offset is over range 300hPa to 1350hPa or the pressure sensor is damaged</li> <li>Unable to calculate computed quantity (temperature or humidity measurement error)</li> </ul>
Error 3	Err3	Internal A/D converter error. Error code -9999. In this state device doesn't work. Contact the distributor.
Error 4	Err4	Internal pressure sensor error. Error code -9999. In this state device not measure pressure. Contact the distributor.

#### 6.3.2 Sensor T7610 controls specification

Table 9. Truth table for controlling sensor T7610	Table 9.	Truth table	for controlling	sensor T7610
---	----------	-------------	-----------------	--------------

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Error codes	When error codes appear	Generate trouble ticket and send to field technician to check this sensor	none

# 7 DEHUMIDIFIER (NEON P/N: 0347810000, NOT A DGD)

#### 7.1 Introduction

For the PICARRO analyzers, there is a WLM (wave length monitor) purge port on the back of the instrument. PICARRO suggested use dry air to purge the WLM through this port at humid sites. Purging the WLM acts to fill the warm box of the analyzer with dry gas. The warm box houses the WLM which is part of the analyzer's laser targeting control loop. The WLM itself enables precise control of the wavelength of light being injected into the cavity. Within the warm box there is a distance of about 10 cm which is open path, i.e., the laser light is seeing the ambient atmosphere at 45°C (the temperature at which the warm box is held). Because water is such a strong absorber, and in the case of the isotopic water systems, the laser is specifically tuned to a frequency of water absorption, this open path segment may result in decay of the light prior to entering the WLM. As a result, the performance of the WLM could vary as ambient conditions change. PICCARO recommends drying the gas seen by the laser in the warm box such that any potential decay due to water absorption is limited.

If the analyzer is operating in a very humid environment, such as above 3% water content (30,000 ppmv water vapor to dry air), dry gas is strongly recommended to be supplied to the WLM purge for the aforementioned reasons. Without this dry gas supply, the analyzer may experience more drift. However, due to the high maintenance cost and efforts of using dry gases, NEON elects to use a dehumidifier to lower the environmental humidity in the instrument hut at 9 NEON sites (See table below), where the PICARRO L2130-I analyzers locate. PICARRO suggested <3% water content (30,000 ppmv water vapor to dry air). To leave some safe margin, we



suggest the cutoff threshold at 25,000 ppm for NEON PICARRO analyzer operating environment. Field technicians should follow SOP to use temperature sensor (0347780000) readings to adjust the dehumidifier to achieve ~25,000 ppmv humidity if the default setting cannot provide humidity to that low level.

Domain	Site with L2130-I water analyzer	Site Type	Dehumidifier?
1	Harvard Forest	Core	Y
2	Smithsonian Conservation Biology Institute	Core	Y
3	Ordway-Swisher Biological Station	Core	Y
4	Guanica Forest	Core	Y
5	University of Notre Dame Environmental Research Center	Core	Y
6	Konza Prairie Biological Station	Core	Y
7	Oak Ridge	Core	Ν
8	Talladega National Forest	Core	Y
9	Woodworth	Core	Ν
10	Central Plains Experimental Range	Core	Ν
11	Caddo/LBJ National Grassland	Core	Y
12	Yellowstone Northern Range (Frog Rock)	Core	Ν
13	Niwot Ridge/Mountain Research Station	Core	Ν
14	Santa Rita Experimental Range	Core	Ν
15	Onaqui-Ault	Core	Ν
16	Wind River Experimental Forest	Core	Ν
17	San Joaquin	Core	Ν
18	Toolik Lake	Core	Ν
19	Caribou Creek (CPCRW)	Core	Ν
20	PUUM	Core	Y
18	Barrow Environmental Observatory	Relocatable	Ν

# Table 10. NEON sites that will have a L2130-i

# 7.2 Overview of Sensor configuration

Display

The default configuration settings of the dehumidifier can be found in the table below:

Parameter	Setting
Power	On
Humidity control	Initial setting: 50% for D03 Ordway, D04 Guanica,
	D20 PUUM, and 60% for rest sites.

 Table 11. Default sensor configuration settings for the dehumidifier.

Humidity (%)



Fan Speed	Medium
Delay off	none

For the application at NEON, the condensed water will be drained outside the hut through a hose, thus no need to empty the built-in bucket.

The humidity setting above is the initial setting based on the historical data for nearby weather stations and our calculations. It can be adjusted to a different value once we have a better understanding about the site environment based on the data collected at our sites.

No sensor configuration data need to be streamed back to CI as L0 data products.

#### 7.3 Command and Control

There is no command and control on dehumidifier itself.

#### 7.3.1 Error handling

Follow the manual and SOP (section 2.1 and 2.2) to do troubleshooting.

#### 7.3.2 Sensor <device> controls specification

N/A.

# 8 GAS CYLINDER PRESSURE SENSOR (DGD CA07140000, CA07150000)

#### 8.1 Introduction

Pressure sensors are used to monitor:

- (i) the pressure on the input port of the pressure reduction regulator (Cylinder pressure); and
- (ii) the pressure on the output port of the pressure reduction regulator (delivery pressure).

There will be 6 gas cylinders used in the EC profile systems for field validation of the LI840A IRGA, L2130-I and G2131-I analyzers:

- 3 cylinders of CO<sub>2</sub> at high, middle and low concentration for routine validation of both the LI840A IRGA and G2131-I analyzer,
- one cylinder of Zero air for the routine field validation of the LI840A IRGA to determine the sensor zero offset, that is also used to purge G2131-I cavity prior to the instrument shut down.
- one archived CO<sub>2</sub> for validation of the LI840A IRGA and G2131-I analyzer over longer time periods (monthly),
- one cylinder of Zero air for the field validation and purge of the L2130-I analyzer. The zero air for the L2130-I field validation will be used to purge the vaporizer and/or dilute the high water vapor



concentration to the measurable range, and carry the water vapor to analyzer, as well as to purge the L2130-I cavity prior to instrument shut down.

Field validation frequency and command and control will be described below in Section 12.

Each of these 6 gas cylinders will be equipped with a two-stage pressure reduction regulator and two pressure sensors to monitor the cylinder pressure and delivery pressure. The pressure in the validation gas cylinder (called "cylinder pressure" below) should not be lower than 400 psig (2758 kPa) for CO<sub>2</sub> and zero air validation gas standards used for LI840A IRGA and G2131-I validation, and the delivered gas pressure on the supply side (call "delivered gas pressure" below) should be recorded for the purpose of monitoring state of health, but will not be used for further scientific data processing. The delivered gas pressure should be 2.5±0.5 psig (17.24±3.45 kPa) for Zero air that will be used for L2130-I validation and purging the laser cavity prior to the instrument shut down. To minimize the waste of CO<sub>2</sub> standard gases during G2131-I validation, the gas flow should be set to 0.3 SLPM, which is controlled by a validation mass flow controller. See "G2131-I Isotope Analyzer Validation" section in this document. There is no need to monitor and flag the delivered gas pressure.

At this time, the Omega Engineering P/N: PX319-3KGI (NEON P/N: 0335480000) and Omega Engineering P/N: PX319-100GI (NEON P/N: 0335490000) will be used to monitor the tank pressure and delivered gas pressure. Here, we describe the configuration, command and control related to the operation of this pressure sensor in section 8.2. A description of how sensor readings shall be converted to pressure units is provided in the associated ATBD (AD [07]). The associated SOP document (AD[06]) explains the procedures for field validation and maintenance.

# 8.2 Overview of Sensor configuration

The acquisition rate from this sensor shall be once every 1 second (1 Hz). The default sensor configuration settings are given in Table below. When the cylinder gas pressure is lower than 400 psig (2758 kPa), calibration and validation should be discontinued (to preserve the rest of the gas in the cylinder for CVAL traceability analysis), and a flag should be set high to alert the technician and to inform post data process. The flag to alert the field technician should be generated at field and sent to trouble ticket center. And the flag to inform post data process should be generated at HQ following the ATBD. When the delivered gas pressure is out of range, i.e. 2-3 psig (13.79-20.68 kPa), for L2130-I validation, a flag should be set high to alert the technician should be generated at the field technician should be generated at process. Again, the flag to alert the field technician should be generated at the flag to alert the field site and sent to the trouble ticket center, and the flag to inform post data processing should be generated at the flag to alert the field technician should be generated at the flag to alert the flag to alert the field technician to adjust regulator, and to inform post data process. Again, the flag to alert the field technician should be generated at the field site and sent to the trouble ticket center, and the flag to inform post data processing should be generated at the field site and sent to the trouble ticket center, and the flag to inform post data processing should be generated at HQ (specified in ATBD).


The gas cylinder locations in the hut are shown in the following figure (taken from AD [8]). Locations from number 9 to 16 are assigned to the cylinders used for the profile system.

Field technicians will swap gas cylinders when the gas cylinder pressure drops below 400 psig (2758 kPa). The gas concentration inside the new cylinder will be different after each swap. The timestamp when the cylinder is



<i>Title</i> : NEON Sensor Command, Control and Config Storage Exchange	Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

swapped will be provided by field technicians. The gas concentration and uncertainties for each cylinder will be provided by CVAL.

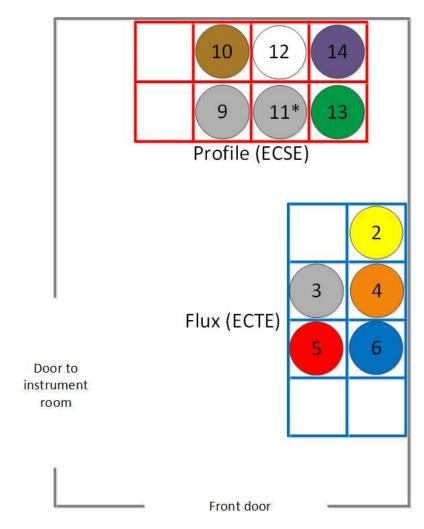

Cylinder Number	System Used	Color	Gas Concentration Measured
2	Flux	Yellow	Archive CO2
3	Flux	N/A	Zero Air (Supplied by local vendor)
4	Flux	Orange	Low (~350 ppm CO2)
5	Flux	Red	Medium (~375 ppm CO2)
6	Flux	Blue	High (~400 ppm CO2)
9	Profile	N/A	CO2 Laser Zero Air (Supplied by local vendor)
10	Profile	Brown	Archive (~-8.5 $\delta$ 13C, 400 ppm CO2)
11*	Profile	N/A	H2O Laser Zero Air (Supplied by local vendor)
12	Profile	White	Low (~-5 δ13C, 350 ppm CO2)
13	Profile	Green	Medium (~-8.5 $\delta$ 13C, 400 ppm CO2)



14	Profile	Violet	High (~-15 δ13C, 500 ppm CO2)

\*Note: Cylinder 11 is zero air for the Picarro L2130-I, if the site does not have a Picarro L2130-I, this spot will be empty.

Figure 1. Cylinder layout at instrument hut

**Table 12.** Default sensor configuration settings for the gas cylinder pressure sensor.

Parameter	Setting
Excitation	Analog, 9–30 V
Output	Analog, 0.004–0.02 A
Data acquisition frequency	1 Hz
Data acquisition streams	Cylinder pressure, delivery pressure

L0 data streams from pressure sensor (DGD: CA07150000) for validation gas cylinder pressure at 1 Hz can be found in Appendix 15.6.

L0 data streams from pressure sensor (DGD: CA07140000) for validation gas delivery pressure at 1 Hz can be found in Appendix 15.6.

L0 data for the gas concentration and associated uncertain for gas cylinders (DGD: 0353710000) will be extracted from CVAL XML file. It can be found in Appendix 15.6.

#### 8.3 Command and Control

N/A

#### 8.3.1 Error handling

When the pressure out of range, a trouble ticket should be generated and sent to field technician.

#### 8.3.2 Sensor PX319-3KGI and PX319-100GI controls specification

**Table 13.** Truth table for controlling sensor PX319-3KGI and PX319-100GI.

Control parameter(s)			Flag output to CI as LO DP
Cylinder pressure			None
Delivery pressure of zero air for L2130-I	Delivery pressure of zero air for L2130-I > 3 psig (20.68 kPa) or < 2 psig (13.79 kPa)	Generate trouble ticket and send to field technician to adjust the hand valve that control delivery pressure	None



#### 9 ABSOLUTE PRESSURE TRANSDUCER (DGD CA08830000)

#### 9.1 Introduction

The absolute pressure sensors are used to monitor the pressure in the sample line behind the critical orifice, which should be 52.8% of ambient pressure or even lower. There will be one absolute pressure transducer for each sample line between the inlet at each different tower measurement levels and the associated pump. Therefore, the number of absolute pressure transducers deployed at each site will vary from 4 to 8. The numbering of the sample line should match with the numbering of measurement levels (ML), i.e., sample line 1 is for ML1, sample line 2 is for ML2, etc.

The absolute pressure readings will be also used to feedback to the associated sample line pump to adjust pump speed to maintain the proper pressure drop in the sample line (i.e., 52.8% or less of ambient pressure). Ambient pressure used for sample line pump control at each NEON site is presented in the table below. This ambient pressure is calculated using the equation below:

$$P = P_b \cdot \left[1 + \frac{L_b}{T_b} \cdot (h - h_b)\right]^{\frac{-g_0 \cdot M}{R \cdot L_b}}$$

where,

 $P_{b} = \text{static pressure (pressure at sea level) [Pa]. Here we use ISA standard 101325 Pa}$   $T_{b} = \text{standard temperature (temperature at sea level) [K]. Here we use ISA standard 15 Celsius (i.e., 288 K)$   $L_{b} = \text{standard temperature lapse rate [K/m] = -0.0065 [K/m]}$  h = height about sea level [m]  $h_{b} = \text{height at the bottom of atmospheric layer [m]}$   $R = \text{universal gas constant} = 8.31432 \frac{\left[\frac{N \cdot m}{mo \, t \, K}\right]}{\left[\frac{m}{s^{2}}\right]}$ 

<sup>M</sup> = molar mass of Earth's air = 0.0289644 [kg/mol]

Domain	Site	Site Type	Latitude	Longitude	Elevation (m)	Barometric pressure (kPa)
1	Harvard Forest	core	42.54	-72.17	348	97.21
	Bartlett Experimental					
1	Forest	relocatable	44.06	-71.29	273	98.08

**Table 14.** Ambient pressure at each NEON site used for control sample line pump



Title: NEON Sensor Command, Control and Config Storage Exchange	Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

2	Blandy	relocatable	39.06	-78.07	182	99.16
2	Smithsonian CRC (SCBI)	core	38.89	-78.14	355	97.13
2	Smithsonian ERC	relocatable	38.89	-76.56	10	101.21
3	Ordway	core	29.69	-81.99	48	100.75
3	•	relocatable	31.19		48	
	Jones			-84.47		100.77
3	Disney	relocatable	28.13	-81.44	20	101.09
4	Guanica	core	17.97	-66.87	126	99.82
4	Lajas	relocatable	18.02	-67.08	16	101.13
5	Steigerwaldt	relocatable	45.51	-89.58	477	95.72
5	Tree Haven	relocatable	45.49	-89.59	461	95.91
5	UNDERC	core	46.23	-89.54	520	95.23
6	Konza - Core	core	39.10	-96.56	415	96.44
6	Konza - Relocatable	relocatable	39.11	-96.61	323	97.50
6	U Kansas Bio Station	relocatable	39.04	-95.19	321	97.53
7	Oak Ridge	core	35.96	-84.28	342	97.29
7	Great Smokey Mtns	relocatable	35.69	-83.50	661	93.63
7	Mountain Lake	relocatable	37.38	-80.52	1170	88.03
8	Talladega	core	32.95	-87.39	164	99.37
9	Dakota-Coteau	relocatable	47.16	-99.11	575	94.60
9	Northern Great Plains	relocatable	46.77	-100.92	589	94.44
9	Woodworth	core	47.13	-99.24	590	94.43
10	CPER	core	40.82	-104.75	1653	82.97
10	Sterling	relocatable	40.46	-103.03	1365	85.96
10	RMNP Castnet	relocatable	40.28	-105.55	2742	72.43
11	LBJ/Caddo	core	33.40	-97.57	272	98.10
11	Klemme	relocatable	35.41	-99.06	520	95.23
12	Bozeman	relocatable	45.66	-111.05	1503	84.51
12	Yellowstone	core	44.95	-110.54	2129	78.22
13	Niwot	core	40.05	-105.58	3478	65.93
13	Winter Park	relocatable	39.86	-105.86	3526	65.53
13	Moab	relocatable	38.25	-109.39	1800	81.48
14	Santa Rita	core	31.91	-110.84	999	89.88
14	Jornada	relocatable	32.59	-106.84	1321	86.42
15	Onaqui	core	40.18	-112.45	1654	82.96
16	Wind River	core	45.82	-121.95	368	96.98
16	Abby Road	relocatable	45.76	-122.33	367	96.99
17	Soaproot	relocatable	37.03	-119.26	1210	87.60



Title: NEON Sensor Command, Control and Configue Storage Exchange	Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Revision: D

17	Teakettle	relocatable	37.01	-119.01	2149	78.03
17	San Joaquin	core	37.11	-119.73	397	96.65
18	Toolik	relocatable	68.66	-149.37	827	91.77
18	Barrow	relocatable	71.28	-156.62	7	101.24
19	Caribou-Poker	core	65.15	-147.50	239	98.48
19	Delta Junction	relocatable	63.88	-145.75	504	95.41
19	Healy	relocatable	63.88	-149.21	171	99.29
20	Olaa Forest Reserve	core	19.554785	-155.26	853	91.48

The sensor used to measure the pressure at inlet behind critical orifice is Omega Engineering PX319-030AI 0-30 psi Absolute Pressure Transducer.

If this pressure is > 55% of ambient pressure, it indicates:

- (i) potential leaks in the sample line,
- (ii) the pump has lost its capability to maintain the low pressure, or
- (iii) the malfunction of the critical orifice.

A trouble ticket should be generated and sent to field technicians.

#### 9.2 Overview of Sensor configuration

The acquisition rate from this sensor shall be once every 1 second (1 Hz). The default sensor configuration settings are given in Table below.

Table 15. Default sensor co	nfiguration settings for the absolute pressure trans	sducer.
-----------------------------	--	---------

Parameter	Setting
Excitation	Analog, 9–30 V
Output	Analog, 0.004–0.02 A
Data acquisition frequency	1 Hz
Data acquisition streams	Absolute pressure

L0 data streams from absolute pressure transducers at 1 Hz (DGD CA08830000) can be found in Appendix 15.6.

#### 9.3 Command and Control

N/A

#### 9.3.1 Error handling

N/A



# 9.3.2 Sensor PX319-030AI controls specification

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as L0 DP
Absolute pressure in sample line	1 min running average of sample line pressure > 55% of ambient pressure	Generate trouble ticket and send to field technician to check pump conditions, absolute pressure sensor, gas line, etc.	None

#### 10 MASS FLOW METER IN SAMPLE LINES (DGD 0341530000)

#### 10.1 Introduction

This flow meter is used to monitor the flow rate in the sample line from inlet at each tower measurement level to their associated vacuum pump. One mass flow meter will be used in each sample line that is associated with each tower measurement level. Therefore, the number of mass flow meters used at NEON tower sites will vary between 4 to 8.

#### **10.2** Overview of sensor configuration

Sensor configuration settings are given in table below.

Parameter	Default Setting
Interface	RS–232 or RS–485
Baud rate	38400
Input/output	8 data bits, no parity, 1 stop bit, no
	flow control
Control valve configuration	Upstream valve
Standard conditions for mass flow calculations	NIST standard conditions (293.15 K,
	101.325 kPa)
Gas select	Air
PID parameters	Factory setting
Response time	0.1 s
Positioning	Upright

#### Table 17. Mass flow meter configuration settings.

L0 data streams from the mass flow meter (DGD 0341530000, Alicat Scientific P/N: MW-20 SLPM-NEON) at 1 Hz can be found in Appendix 15.6



Flow rate for each sample line should be maintained at 5-11 SLMP across all NEON sites. Data should be flagged outside the normal operation flow rate ±0.5 SLMP tolerance. These flags will be generated at HQ following the ATBD. The normal operation flow rate will be site specific and measurement level specific, and will be defined in ATBD.

# **10.3** Command and control

If the flow rate is out of the normal range:

- (i) the air plumbing path may be clogging,
- (ii) the tube maybe pinched, or
- (iii) the site may have experienced power failure (the assembly vacuum pump will have lost power in this case).

To protect the sensors, some command and control of the sample line pump should be done. See the **Sample Line Pumps** section below for details.

#### 10.3.1 Error handling

When the flow rate is out of range and the gas pressure flag is set high, a flag will be generated and sent to CI.

#### **10.3.2** Controls specification

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Mass flow rate	Mass flow rate >normal operation flow rate +0.5 SLPM or < normal operation flow rate -0.5 SLPM	Generate a trouble ticket and send to field technician for leak check/clogging	None

#### Table 18. Truth table for controlling sensor MW-20 SLPM-NEON

#### 11 MASS FLOW CONTROLLER (DGD 0341500000 AND DGD 0341570000)

2 mass flow controllers will be used in the profile system assembly:

- one to control the validation gases during the validation mode for the LI840A IRGA or the G2131-I during field validation. During LI840A field validation, the flow should be controlled at 1.5 SLPM; During G2131-I field validation, the flow should be controlled at 0.3 SLPM; when no validation is occurring, the flow controller should be set to 0 SLPM to prevent the flow controller from overheating. Note: The LI840A and G2131-I should never be field validated at the same time. See section 10 for command and control description.
- one is located between the LI840A IRGA and its pump to maintain the air sample or validation gas flow through the LI840A IRGA cell at a flow rate of 1 SLPM ± 0.2 SLPM at all times.



# **11.1** Mass flow controller for field validation gases (Validation Gas MFC, DGD 0341500000)

#### 11.1.1 Introduction

This mass flow controller (Validation Gas MFC) is used to maintain and monitor a constant flow rate of validation gas standards delivered to the LI840A IRGA or G2131-I analyzer. One mass flow controller will be used at each site for the 4 unique CO<sub>2</sub> gas standards and one zero air standard. It is located between the Validation Gas Manifold and the tee splitter to the CO<sub>2</sub> Sample manifold and the IRGA Sample Manifold. At this time, an Alicat Scientific P/N: MC-5 SLPM-NEON mass flow controller will be used for this purpose. Below we describe the configuration, command and control related to the operation of this flow controller.

#### **11.1.2** Overview of sensor configuration

Sensor configuration settings are given in table below.

Parameter	Default Setting
Interface	RS-232
Baud rate	19200
Input/output	8 data bits, no parity, 1 stop bit, no
	flow control
Control valve configuration	Upstream valve
Standard conditions for mass flow calculations	NIST standard conditions (293.15 K,
	101.325 kPa)
Gas select	Air
PID parameters	Factory setting
Response time	0.1 s
Positioning	Upright
Flow set point	1.5 SLPM for LI840A validation
	0.3 SLPM for G2131-I validation
	0 SLPM when no validation occurs

L0 data streams from this mass flow controller (DGD 0341500000) at 1 Hz for validation gases can be found in Appendix 15.6.

#### **11.1.3 Command and control**

N/A

#### 11.1.3.1 Error handling

N/A



# **11.1.3.2** Controls specification

 Table 20.
 Truth table for controlling sensor (MFC for LI840A validation, DGD 0341500000).

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Mass flow rate from this mass flow controller during LI840A validation	1 min running average mass flow rate after CO <sub>2</sub> reaches defined absorbtance slope >1.5 SLPM or <1.2 SLPM	Generate a trouble ticket and send to field technician to check MFC setpoint in the codes and MFC conditions, and leak check as needed	None
Mass flow rate from this mass flow controller during G2131-I validation	1 min running average mass flow rate <0.3 SLPM	Generate a trouble ticket and send to field technician to check MFC setpoint in codes and MFC conditions, and leak check as needed	None

## 11.2 Mass flow controller for LI840A (DGD 0341570000)

## 11.2.1 Introduction

This mass flow controller is used to maintain and monitor a constant sample flow rate through the LI840A IRGA cell. One mass flow controller will be used at each site for this purpose. It is located between LI840A IRGA and its external pump.

## **11.2.2** Overview of sensor configuration

Sensor configuration settings are given in table below

Parameter	Default Setting
Interface	RS-232
Baud rate	19200
Input/output	8 data bits, no parity, 1 stop bit, no
	flow control
Control valve configuration	Upstream valve
Standard conditions for mass flow calculations	NIST standard conditions (293.15 K,
	101.325 kPa)
Gas select	Air
PID parameters	Factory setting
Response time	0.1 s
Positioning	Upright
Flow set point	1.0 SLPM for LI840A at all time

Table 21. Mass Flow controller (MFC) configuration settings (for LI840A)



L0 data streams from the mass flow controller at 1Hz (for sample air stream, DGD 0341570000) can be found in Appendix 15.6.

# **11.2.3** Command and control

N/A

# 11.2.3.1 Error handling

N/A

# 11.2.3.2 Controls specification

 Table 22.
 Truth table for controlling sensor (MFC for LI840A sampling, DGD 0341570000).

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
Mass flow rate from this mass flow controller during LI840A sampling	1 min running average mass flow rate >1.2 SLPM or <0.8 SLPM	Generate a trouble ticket and send to field technician to check MFC setpoint in codes and MFC conditions, and leak check as needed	None

## 12 EC PROFILE ASSEMBLY INFRASTRUCTURE (DGD CD06640001, CD06640002, CA10210000)

## 12.1 Introduction of infrastructure

This section describes the configuration, command and control related with the infrastructure (e.g., solenoids, manifolds, pneumatics) within the EC Profile assembly.

# 12.2 Overview of assembly configuration EC profile assembly

This section is broken into segments which collectively account for the components within the EC profile assembly. This section focuses on the configurations of the manifold, solenoids, validation manifolds, and heaters. Please refer to the appendix for a schematic of the entire EC profile assembly.

A critical flow orifice will be used at each sample line inlet. The air sample pressure will drop to 58.2% of ambient pressure or lower after passing the critical flow orifice. This large pressure drop will be sufficient to prevent condensation inside the sampling line at any given environmental conditions found at NEON sites. At this time, the same critical flow orifice will be used across all measurement levels at all NEON sites, which will yield flow rate range of 5 to 11 SLPM, but maintain the same laminar flow regime across all measurement levels at all NEON sites.

To avoid ice or rime ice clogging the inlet and critical flow orifice, heating should be applied to the screened inlet and critical flow orifice.



The vacuum pump selected should be efficient enough to provide continuous flow and sufficient pressure drop for each sample line.

From the sample line, a subset of the air sample will be delivered to the analyzers for analysis. To minimize the memory effects of the isotope analysis, the tubing length to deliver this subset of air sample to the G2131-I and L2130-I should be as short as possible, ideally < 1 m.

The assembly design should allow the LI840A IRGA, G2131-I analyzer and L2130-I analyzer to operate and/or validate independently without interfering with each other.

After an interruption of the sensor operation (e.g., after power failure, shut down instrument for maintenance or trouble shutting the profile system will resume operation as following to avoid the LI840A and Picarros being calibrated/validated at the same time, or sampling from the same level:

- 1. Calibrate LI840A, validate LI840A, then start normal complete sampling cycle from the top most level
- 2. While the LI840A is calibrating/validating the G2131-I will start sampling from top most level. When the LI840A starts sampling, validation of the G2131-I begins if more than 23 hours has elapsed since the last validation, thereafter it starts normal complete sampling cycle from top most level.
- 3. The L213-I will start normal complete sampling cycle from top most level. Sampling will continue until a field technician starts the validation cycle manually, which be followed by a return to the normal complete sampling cycle from top most level.

# 12.2.1 Sample Line Pumps and IRGA pump (DGD CD07150000)

The vacuum pump selected for each sample line should be able to provide continuous flow and sufficient pressure drop from inlet to the pump at all NEON terrestrial sites. The absolute pressure readings (DGD CA08830000) behind the inlet critical orifice will be used to feedback to the associated sample line pump and adjust pump speed to maintain a proper pressure drop in the sample line (i.e., 52.8% of ambient pressure or even lower).

The pump selected for LI840A IRGA should be capable of providing flow at 1 SLPM.

At NEON, the pumps selected for sample lines and for IRGA are the same type: Gast Manufacturing, Inc. P/N: 2032-101-G644.

Parameter	Default
Power	on

 Table 23. Default configurations for the Pump

The default setting for pump will be "on" during normal operation no matter whether the analyzers are in sampling mode or validation mode.



There is no command and controller on IRGA pump.

However, for sample line pump, when the sample line is clogged, if the pump keeps running, it will eventually be damaged, and can potentially damage other sensors and parts in the system.

The causes of the clog could be:

- i) Ice/hoar frost/rime ice buildup at the screened inlet and clogging the orifice,
- ii) Debris or insects have been sucked in and are stuck at the screen inlet, or
- iii) Dirt buildup at the screened inlet and clogging the orifice or filter.

The first one can be prevented by turning on the heater prior to the occurrence of ice/hoar frost/rime ice, which will be discussed in the heater section below. For the second one, if the pump is stopped and pressure is released, the debris or insects should fall off from inlet. If after trying to stop and restart the pump 3 times, the clog problem is not resolved, the pump should be stopped. Similarly for the third one, if after trying to stop and restart pump 3 times, the clog problem is not resolved, the clog problem is not resolved, the pump should be stopped.

If flow in the sample line is < 4 SLPM, and dew point temperature ( $T_d$ ) is above 2 °C (output from both HMP155 sensors at the tower top and at the soil array), stop pump for 2 minutes, then restart and run for 5 min. If the flow rate is still <4 SLPM, repeat again. After a third try, if the issue persists, the DAS should stop the pump, and also generate a trouble ticket to field tech.

The DAS (LC) will control the pump through controlling the voltage applied to the pump. This voltage (0-5 volts) sent to pump will be streamed as L0 DPs and used for post-data processing to generate system health flags. 0 volts means the pump is stopped. Typical voltage for the sampling line pump is around 2.5 to 4.5 volts.

Dew/frost point at tower-top $(T_{d_t})$	NEON.DOM.SITE.DP0.00098.001.01358.000.VER.000 *
Dew/frost point at soil plot $(T_{d_s})$	NEON.DOM.SITE.DP0.00098.001.01358.003.000.000

Table 24. Existing data products that will be used in profile system screened inlet heater command and control

\* Vertical measurement level (VER) where the HMP155 locates at tower top varies from site to site.

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
		Turn off pump for 2 min, and	NA
		then turn on the pump. If 1 min	
	1 min moving average	moving average flow rate < 4	
Flow water in computer line	of the flow rate	SLPM after 5 min, stop the pump	
Flow rate in sample line	<4SLPM, and $T_{d t}$ >2 °C	for 2 min and then turn on the	
	and $T_{ds} > 2^{\circ}C$	pump. If 1 min moving average	
		flow rate < 4 SLPM after 5 min,	
		stop the pump for 2 min and	

## Table 25. Truth table to control the sample line pumps (DGD CD07150000)



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465 Author: H. Luo/N. Durden		Revision: D

		then turn on the pump. If 1 min moving average flow rate < 4 SLPM after 5 min, stop the pump, send trouble ticket to field	
		technician to check inlet clogging and check pump conditions	
Flow rate in sample line	1 min moving average of the flow rate <4SLPM, and heater is on (see section 12.3.1 for heater control)	Turn off pump for 2 min, and then turn on the pump. If 1 min moving average flow rate < 4 SLPM after 5 min, stop the pump for 2 min and then turn on the pump. If 1 min moving average flow rate < 4 SLPM after 5 min, stop the pump for 2 min and then turn on the pump. If 1 min moving average flow rate < 4 SLPM after 5 min, stop the pump, send trouble ticket to field technician to check heater and check pump conditions	NA

L0 data products for sample line pumps at 0.2 Hz or faster (DGD CD07150000) can be found in Appendix 15.6.

# 12.2.2 IRGA sample manifold (CD06640001)

This manifold and its associated solenoid valves control the gas delivered to the LI840A IRGA. This manifold shall consist of inlet ports (connected to IRGA sample valves, up to 8, and one additional inlet port to intake validation gas) and one outlet port (deliver subset of air sample or validation gas to IRGA). The number of inlet ports on the IRGA Sample Manifold that will be used is dependent on the number of tower measurement levels, which varies from 4 to 8 (depending on site): 8 measurement levels are used as a default in this document. During normal sampling operations (default), the configuration of the IRGA sample valves and the IRGA sample manifold is in the table below.

Parameter	Default	Notes
IRGA Sample valves	8 valves, Normally	This is to deliver the level
	closed	specific subset of air sample
		to IRGA sample manifold.
Inlet ports on IRGA	8 ports, always	This is for the level specific
sample manifold	open	subset of air samples to get
(connected to IRGA		into the IRGA sample
sample valves)		manifold



Inlet port on manifold (to intake validation gas)	1 port, always open	This is to deliver validation gas through the IRGA sample manifold prior to LI840A IRGA
Outlet port on manifold	1 port, always open	This port is to deliver the level specific subset of air sample or validation gas to LI840A IRGA

# **12.2.3** H<sub>2</sub>O sample manifold (CD06640001)

This manifold shall consist of inlet ports (connected to H<sub>2</sub>O sample valves, up to 8) and one outlet port (to deliver a subset of air sample to the analyzer). The number of inlet ports on the profile manifold will be used is dependent on the number of tower measurement levels, which varies from 4 to 8 (depending on individual site). Here 8 measurement levels is the default in this document. There is one additional inlet port on this manifold to allow the zero air to flow through the manifold from the H<sub>2</sub>O Manifold Zero Air Valve to the L2130-I instrument. During normal sampling operations (default), the configuration of the Sample Level Select Valves and the Isotopic H<sub>2</sub>O sample level manifold is in the table below.

Parameter	Default	Notes
H <sub>2</sub> O sample valves	8 valves, Normally	This is to deliver the level
	closed	specific subset of air sample
		to Isotopic H <sub>2</sub> O sample level
		manifold
Inlet ports on manifold	8 ports, always	This is for air samples to get
(connected H <sub>2</sub> O sample	open	into the Isotopic H <sub>2</sub> O sample
valves)		level manifold
Inlet ports on manifold	1 port, always	This is for zero air to get into
(connected to H <sub>2</sub> O	open	the H <sub>2</sub> O Sample manifold
Manifold Zero Air Valve)		during validation mode.
Outlet port on manifold	1 port, always	This port is to deliver the
	open	level specific subset of air
		sample or zero air to L2130-I
		analyzer.

Table 27. Configurations for the H<sub>2</sub>O Sample manifold

## 12.2.4 Valves to deliver zero air to L2130-I (DGD CD06640001, DGD CD06640002, CA10210000)

There are four valves in the design to deliver the Zero Air to the L2130-I analyzer:

- 1. H<sub>2</sub>O Analyzer WLM Purge Valve (DGD CD06640002)
- 2. H<sub>2</sub>O Analyzer Zero Air Valve (DGD CD06640001)



- 3. Vaporizer 3-way Valve (DGD CA10210000)
- 4. H<sub>2</sub>O Manifold Zero Air Valve (DGD CD06640001)

During sampling mode, the four valves should be closed to avoid zero air flowing to the H<sub>2</sub>O Sample Manifold. During validation mode the H<sub>2</sub>O Analyzer WLM Purge Valve, H<sub>2</sub>O Analyzer Zero Air Valve, and Vaporizer 3-way Valve should be open to allow the zero air to flow to the vaporizer and analyzer. While the H<sub>2</sub>O Manifold Zero Air Valve should only be opened before the instrument is shut down to allow the zero air to flush out the H<sub>2</sub>O Sample Manifold and L2130-I laser cavity to prevent water vapor condensation.

See their configuration in the table below. Command and control statements are provided for these sampling / validation solenoids in Section 7.3.

Table 28. Configurations for H2O Analyzer WLM Purge Valve, H2O Analyzer Zero Air Valve, Vaporizer 3-way Valveand H2O Manifold Zero Air Valve

Parameter		Default	Field validation mode	Notes
H <sub>2</sub> O Analyzer WLM Purge Valve		Normally closed	Open	
H <sub>2</sub> O Analyzer Zero Air Valve		Normally closed	Open	
Vaporizer 3-way Inlet port 1 Valve		Normally open	Closed	Connect to H <sub>2</sub> O Sample Manifold
	Inlet port 2	Normally closed	Open	Connect to a Tee between vaporizer purge port and H <sub>2</sub> O Analyzer Zero Air Valve
Outlet port		Always open	Open	Common port, connect to vaporizer Sample port
H <sub>2</sub> O Manifold Zero Air Valve		Normally closed	Closed	Only open before instrument shut down to flush H <sub>2</sub> O Sample manifold and L2130-I laser cavity

# 12.2.5 CO<sub>2</sub> sample manifold (CD06640001)

This manifold and its associated solenoid vales control the gas delivered to the G2131-I analyzer. This manifold shall consist of inlet ports (connected to CO<sub>2</sub> sample valves, up to 8, and one additional inlet port to intake validation gas) and 1 outlet port (to deliver a subset of air sample or validation gas to the analyzer). The number of inlet ports on the CO<sub>2</sub> sample manifold is dependent on the number of tower measurement levels, which varies from 4 to 8 (depending on site). 8 measurement levels is a default in this document. During normal sampling operations (default), the configuration of the CO<sub>2</sub> sample valves and the CO<sub>2</sub> sample manifold is in the table below.

Table 29. Configurations for the Isotopic CO<sub>2</sub> sample manifold

Parameter I	Default	Notes
-------------	---------	-------



	1	
CO <sub>2</sub> Sample valves	8 valves, Normally	This is to deliver the level
	closed	specific subset of air sample
		to CO <sub>2</sub> sample manifold.
Inlet ports on CO <sub>2</sub>	8 ports, always	This is for the level specific
sample manifold	open	subset of air samples to get
(connected to CO <sub>2</sub>		into the CO <sub>2</sub> sample
sample valves)		manifold
Inlet port on manifold	1 port, always	This is to deliver validation
(to intake validation	open	gas through the CO <sub>2</sub> sample
gas)		manifold prior to G2131-I
		analyzer
Outlet port on manifold	1 port, always	This port is to deliver the
	open	level specific subset of air
		sample or validation gas to
		G2131-I analyzer.

# 12.2.6 Validation Gas Manifold (DGD CD06640001)

The Validation Gas Manifold and its associated valves will be used to control the mass flow rate of the gas standards to the G2131-I analyzer or the LI840A IRGA for field validation. Validation of these two instruments should not occur at the same time. The known gas standards that will be used include 3 cylinders of CO<sub>2</sub> at high, intermediate and low concentrations and one zero air for routine validation of LI840A IRGA (with a frequency of 23 hours between IRGA calibrations). The same 3 CO<sub>2</sub> standards will be used for the routine validation of G2131-I (frequency is once every 23 hours), but no zero air will be used. 1 archive cylinder of CO<sub>2</sub> with a concentration of approximately 400 ppm will be used for field validation of LI840A IRGA and G2131-I at a longer time period (monthly).

The Validation Gas Manifold and its associated valves will be used to control the flow of known gas standards to the LI840A IRGA for field calibration, which should occur every 6 days or when the IRGA cell pressure fluctuation >= 1.2 kPa to minimize the impact of the analyzer drift on data quality. See command and control section below for the sequence of field validation and calibration.

The Val Gas Select valves that are attached to the Validation Gas Manifold will pass a specific flow of CO<sub>2</sub> of known concentration into the Validation Gas Manifold, to the Val Gas MFC, then to the tee splitter to CO<sub>2</sub> Sample manifold and IRGA Sample Manifold, and to either the CO<sub>2</sub> sample manifold during G2131-I field validation or to the IRGA Sample Manifold during LI840A field validation or field calibration. LI840A field validation or field calibration.

Each span gas line will be equipped with a Val Gas select valve. The validation sequence should be from low CO<sub>2</sub> concentration to high CO<sub>2</sub> concentration. Only one gas standard is delivered to either the LI840A or G2131-I analyzer at a given time. The Val Gas select valves should be 2-way solenoid valves. Inlet ports of the Val Gas



valves are connected to CO<sub>2</sub> gas cylinders, and the outlet ports of the valves are connected to the Val Gas MFC. During normal sampling operations (default), the configuration of this 2-way solenoid valves is normally closed.

Validation Gas Manifold has 6 inlet ports to intake the validation gases, and one outlet port to deliver the validation gases to the CO<sub>2</sub> Sample manifold or to the IRGA Sample Manifold. During normal sampling operations (default), the configuration of this manifold is showed in the table below.

Parameter	Default	Notes
Val Gas select valves	6 valves, Normally closed	This is to deliver the validation gas from gas cylinders to Validation Gas Manifold
Inlet ports on manifold (connected to Val Gas select valves)	6 ports, always open	This is for the validation gas to get into the Validation Gas Manifold.
Outlet port on manifold	1 port, always open	This port is to deliver validation gas from the Validation Gas Manifold to the CO <sub>2</sub> Sample manifold or to the IRGA Sample Manifold.
CO <sub>2</sub> Val Gas Valve	1 valve, Normally closed	This is to deliver the validation gas from the Validation Gas Manifold to the CO <sub>2</sub> Sample manifold.
IRGA Val Gas Valve	1 valve, Normally closed	This is to deliver the validation gas from the Validation Gas Manifold to the IRGA Sample Manifold.
IRGA Vent Valve	1 valve, Normally closed	This is not used during sampling mode or calibration/validation mode. It is just an safety vent used for emergency vent if needed.

Table 30. Default configurations for the Isotopic CO<sub>2</sub> Validation Gas Manifold

# 12.3 Command and Control

A number of command and control algorithms shall be implemented to monitor and control the functionality of the EC profile assembly. The following command and control statements deal with heating and the control of multiple solenoids within the system. Unfortunately, many errors that may occur within the system, such as leaks, cannot be fixed via command and control and must be manually fixed by a field technician. For more information on the latter please refer to the Standard Operating Procedures document (AD [05]).

# 12.3.1 Heaters (No DGD)

To avoid ice or rime ice clogging the inlet and critical flow orifice, heating should be applied to the screened inlet and critical flow orifice at each tower measurement levels. Heating should be low (maximum 50 W and not exceed heating of 70 Celsius at any time) to avoid the stable isotopic fractionation.



Heater control is based on the ambient air and the conditions when rime ice could happen (when the air temperature equals or is lower than the dew point temperature, and the air temperature reads close to or below water freezing point (0 °C). So, if air temperature is within 2 °C above the dew point temperature, and air temperature is  $\leq 0^{\circ}$ C, then turn on the heater. After the heater is switched on, heating should be maintained at 10 Celsius +/- 5 Celsius above dewpoint temperature. When air temperature is 5 °C higher than dew point temperature, then turn the heater off.

However, since there are multiple measurement levels on the vertical tower profile, and each level has its own temperature measurement and humidity measurement, it will be very complicated to do boom specific heater command and control. Therefore, only the dew point temperature and air temperature outputted by HMP155 sensors assembly at the tower top and at ground level at the soil array, which typically bound the worst freezing conditions. The logic is to monitor the conditions at the tower top and at ground level, and if one of them approaches the frost conditions, then turn on the screened inlet heaters on all profile levels at the same time. When air temperature is 5 °C higher than dew point temperature at both tower top and at ground level, turn off the screened inlet heaters on all profile levels at the same time. To minimize the uncertainty among sampling levels, heating applied to intake tube inlet at all measurement levels at that site shall be triggered on and/or off at the same time (+/- 5 s).

Because the heater used in the profile system does not have a chip, it is not a data generating device (DGD), therefore the heater on/off status cannot be streamed back to CI as an LO data product. But the heating time period can be flagged during the post data process using same algorithms as below. See heater command and control below.

L0 data product	L0 data product code
Dew/frost point at tower-top $(T_{d_t})$	NEON.DOM.SITE.DP0.00098.001.01358.000.VER.000*
Dew/frost point at soil plot $(T_{d_s})$	NEON.DOM.SITE.DP0.00098.001.01358.003.000.000
Aspirated air temperatures at tower top $(T_{air_t})$	NEON.DOM.SITE.DP0.00098.001.01309.000.VER.000*
Aspirated air temperature at bottom boom $(T_{air_b})$	NEON.DOM.SITE.DP0.00098.001.01309.003.000.000

Table 31. Existing data products that will be used in profile system screened inlet heater command and control

\* Vertical measurement level (VER) for the tower top HMP155 varies from site to site, depending on the number of tower levels at that site.

Control parameter(s)	Condition	Data acquisition system action	Flag output to CI as LO DP
$T_{air_t}, T_{d_t}, T_{air_b}, T_{d_s}$	If ( $T_{air_t} < T_{d_t}$ +2 °C and	Turn heater on	NA
	$T_{air_t} \le 0$ °C) or ( $T_{air_b} <$		
	$T_{d\_s}$ +2 °C and $T_{air\_b} \le$ 0 °C)		
$T_{d t}, T_{d s}$	If $T_{d t} > T_{d s}$	Heater on and maintain inlet	NA
		heating at 10±5 °C above $T_{d_t}$	

Table 32. Truth ta	able to control the	screened inlet	heater (no DGD)*
--------------------	---------------------	----------------	------------------



$T_{d\_t}, T_{d\_s}$	If $T_{d_t} < T_{d_s}$	Heater on and maintain inlet heating at 10±5 °C above $T_{d,s}$	NA
$T_{air_t}, T_{d_t}, T_{air_b}, T_{d_s}$	If $T_{air_t} > T_{d_t}$ +5 °C and $T_{air_b} > T_{d_s}$ +5 °C	Turn heater off	NA

\* All data in this table is observation measurement from HMP155 humidity sensors

# **12.3.2** Cycling of Profile Solenoids during sampling mode

The Sample Valves will be used here to subsample and deliver air samples to the LI840A, G2131-I and L2130-I analyzers. In order to properly subsample the incoming ambient air at each level of the tower, cycling of the Sample Valves connected to IRGA Sample Manifold, H<sub>2</sub>O Sample Manifold and CO<sub>2</sub> Sample Manifold should be completed from highest (vertical height) to lowest level of the tower consistently at all sites.

The tower measurement levels vary from 4 to 8 levels. Using the same definition as in other NEON documentation, measurement level 1 should be the bottommost level. The level number increases with vertical tower height.

# 12.3.2.1 LI840A sampling (DGD CD06640001)

For the LI840A IRGA, a complete cycle of profile sampling measurements will include all measurement levels from the topmost level to the bottommost level at that site. The table below shows the command and control structure for a normal complete cycle under sampling mode. Time 0 is the time that the sampling mode starts a complete cycle.  $\Delta t$  is the time length needed to complete sampling at one measurement level, which includes the times for settling (including purge, stabilization, solenoid switching) and measurement.  $\Delta t$  is defined as **3 minutes** in the current design. When sampling measurement resumes after interruptions (e.g., power failure, calibration/validation, maintenance), a complete sampling cycle should start from the highest (vertical height) and continue to the lowest level of the tower. One measurement cycle should immediately be followed by the next measurement cycle without a break except for periodical field validation or field calibration.

Table 33. Example of one cycle sequence for IRGA Sample Valves\* (1 for open, and 0 for closed, assume 8levels).

IRGA Sample			S	Calibration/validation					
valve status	0	∆t	2 <i>∆t</i>	3 ∆t	4 ∆t	5 ∆t	6 ∆t	7 ∆t	mode
Level 8	1	0	0	0	0	0	0	0	1
Level 7	0	1	0	0	0	0	0	0	0
Level 6	0	0	1	0	0	0	0	0	0
Level 5	0	0	0	1	0	0	0	0	0



<i>Title</i> : NEON Sensor Command, Control and Config Storage Exchange	Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

Level 4	0	0	0	0	1	0	0	0	0
Level 3	0	0	0	0	0	1	0	0	0
Level 2	0	0	0	0	0	0	1	0	0
Level 1	0	0	0	0	0	0	0	1	0

Note:\*: IRGA sample valve at the top most measurement level is open during LI840A calibration/validation to maintain stable IRGA cell pressure.

L0 data streams from the IRGA Sample Valves at 0.2 Hz (DGD CD06640001) can be found in Appendix 15.6.

# 12.3.2.2 G2131-I and L2130-I sampling (DGD CD06640001)

For the G2131-I and L2130-I, a complete cycle of profile sampling measurements will include all measurement levels from the top most level to the bottom most level at that site. The table below shows the command and control structure for the normal process under sampling mode. Time 0 is the time that the sampling mode starts a complete cycle.  $\Delta t$  is the time length needed to complete sampling at one measurement level, which include the times for settling (including purge, stabilization, solenoid switching) and measurement.  $\Delta t$  is defined as 10 **minutes** in the current design. When sampling measurement resumes after interruptions (e.g., power failure, calibration/validation, maintenance, etc.), a complete sampling cycle should start from highest (vertical height) of the tower. One measurement cycle should immediately be followed by the next measurement cycle without a break except for periodical field validation.

		Sampling mode starting time									
Sample valve status	0	Δt	2∆t	3 ∆t	4∆t	5 ∆t	6∆t	7 ∆t			
Level 8	1	0	0	0	0	0	0	0			
Level 7	0	1	0	0	0	0	0	0			
Level 6	0	0	1	0	0	0	0	0			
Level 5	0	0	0	1	0	0	0	0			
Level 4	0	0	0	0	1	0	0	0			
Level 3	0	0	0	0	0	1	0	0			
Level 2	0	0	0	0	0	0	1	0			
Level 1	0	0	0	0	0	0	0	1			

Table 34. Example of one cycle sequence for CO<sub>2</sub> Sample Valves or H<sub>2</sub>O Sample Valves (assume 8 levels).



- a. If a site has both G2131-I and L2130-I analyzers, the cycle sequence above will be identical for Sample Valves connected to H<sub>2</sub>O Sample Manifold and CO<sub>2</sub> Sample Manifold.
- b. 1 = open valve, 0 = close valve.

L0 data streams from **CO**<sub>2</sub> Sample Valves and **H**<sub>2</sub>**O** sample Valves at 0.2 Hz (DGD CD06640001) can be found in Appendix 15.6.

# Important notes:

- The Picarro G2131-I and Picarro L2130-I will always sample at the same level during the same time period while they are not in validation mode; However, although both the G2130-I and L2130-I have the same validation interval of 23 hours, because L2130-I validation cannot start until somebody manually initiates the validation process, G2131-I and L2130-I do not have the same field validation schedule. There are two scenario:
  - a. Both the G2131-I and L2130-I sample at the same level at the same time, then the G2131-I starts the field validation. The L2130-I should proceed with sampling as normal. Once the G2131-I finishes field validation, both the G2131-I and L2130-I should start a complete sampling cycle from the top most level.
  - b. Both the G2131-I and L2130-I sample at the same level at the same time, then the L2130-I starts the field validation process. The G2131-I should proceed with sampling as normal. Once the L2130-I finishes the field validation process, both the G2131-I and L2130-I should start a complete sampling cycle from the top most level.
- 2. The LI840A IRGA should never sample at the same level as the Picarro G2131-I and Picarro L2130-I at the same time to avoid the large pressure fluctuation that could exceed the instruments' capability to handle. There are two scenarios:
  - a. If it is time for the LI840A to switch to a level that is already being sampled by the Picarros, then the LI840A should skip this level and move the next level in the sequence. The Picarros shall continue sampling at this level uninterrupted.
  - b. If it is time for the Picarros to switch to a level that is already being sampled by the LI840A, then the LI840A shall stop sampling immediately and move the next level, and the Picarros shall continue their sequence and begin sampling at this level immediately.

# 12.3.3 LI840A field calibration and field validation (DGD CD06640001, DGD CD06640002)

Field calibration is only applied to the LI840A IRGA CO<sub>2</sub> channel. The H<sub>2</sub>O channel will not be calibrated at the field site. The field calibration of the LI840A should occur after the LI840A resumes operation from interruptions or after the IRGA cell experiences pressure fluctuation >= 1.2 kPa. Field calibration should be repeated every 6 days thereafter (i.e., day 1, day 7, day 13, ...).



Field calibration should be done at steady-state (i.e., when the absorptance slope (based on the regression of last 20 sample points at 1Hz sampling frequency) in moving windows is  $< 1 \times 10^{-5}$ , then perform calibration) using a two-point calibration consisting of a zero air ( $<0.5 \mu$ mol CO<sub>2</sub> mol<sup>-1</sup>) and a high CO<sub>2</sub> concentration gas standard (450-500 µmol CO<sub>2</sub> mol<sup>-1</sup>). Since it typically takes ~2 minutes to reach absorptance slope  $< 1 \times 10^{-5}$ , calibration using one gas standard typically takes < 5 min. To avoid wasting gas, if it takes >5 min to reach absorptance slope  $< 1 \times 10^{-5}$ , then force a field calibration at the end of 5 minutes. **Once the zero or span command is sent**, **zero gas or span gas should run for additional 1 min. This will allow us to collect additional measurements with reference gases and with the new calibration applied, which will be used in a later ATBD process. Routine field calibration should start at the end of a full sampling cycle every 143 hours (5 days plus 23 hours), or at the closest possible time after 143 hours since last calibration expires.** 

Calibration coefficients resulting from field calibration should be sent back to CVAL periodically for their records. CVAL will then submit this information to CI for archiving and for the use in the post-data process.

Routine field validation will occur daily (every 23 hours) between field calibrations. Field validation should be performed at steady-state (i.e., when the absorptance slope (based on the regression of last 20 sample points at 1Hz sampling frequency) in moving windows  $< 1 \times 10^{-5}$ , and trailing 2.5 min average). To avoid wasting gas, if it takes >5 min to reach an absorptance slope  $< 1 \times 10^{-5}$ , then the 2.5 min averaging time starts at the end of the 5 min. Validation should start at the end of a full sampling cycle every 23 hours, or at the closest possible time after 23 hours expires.

Monthly field validation will occur once a month using the same gas standards used for routine validation plus an additional 'archived' CO<sub>2</sub> gas standard. The strategy to determine the steady-state and trailing 2.5 min average is identical to the field calibration strategy above.

During the sampling mode, Val Gas Select valves, and the IRGA Val Gas Valve should be closed. While during the validation mode, these valves should be open to allow selected validation gas to flow to the IRGA Sample Manifold. The IRGA Vent Valve remains closed during sampling mode and validation mode. The flag status should be 0 for sampling (valve closed), and 1 for validation/calibration (valve open). During validation mode, only one known gas standard will be delivered at a time to the analyzer to avoid cross contamination. The flow rate should be **1.5 SLPM** prior to IRGA Val Gas Valve (controlled by the flow controller). The IRGA Vent valve is only used for emergency vent if needed.

When zero air is used for LI840A field calibration, the sequence is zero H<sub>2</sub>O, then zero CO<sub>2</sub>.

**Table 35.** Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during fieldcalibration of LI840A.

	_	Sampling	Field cali startin	
Validatio	dation valves Sampling Mode		0	∆t+1 min
	Zero Air	0	1§	0



	Low $CO_2$	0*	0	0
Val Gas Select	Intermediate $CO_2$	0*	0	0
valves status (0/1)	High $CO_2$	0*	0	1
	Archive $CO_2$	0*	0	0
IRGA Val Gas Va	alve status (0/1)	0	1	1
IRGA Vent Val	ve status (0/1)	0	0	0

#### Notes:

- 1) 1 = open valve, 0 = close valve.
- 2)  $\Delta t = x \min$ , where x min is the purge time depending on the time length to reach steady-state. Max value for x is 5 min); zero or span command is sent once steady-state is reached. Zero or span reference gas should run for additional 1 min after the zero or span commend is sent.
- 3) \*: The status in these cells could be 1 if G2131-I is at validation mode.
- 4)  $\S:$  When zero air is used for LI840A field calibration, the sequence is zero  $H_2O$ , then Zero  $CO_2$

# **Table 36.** Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during routinefield validation of the LI840A IRGA.

		Sampling	Routir	ne validation	mode startin	g time
Validatio	on valves	Mode	0	Δt	2 ∆t	3 ∆t
	Zero Air	0	1	0	0	0
	Low CO <sub>2</sub>	0*	0	1	0	0
Val Gas Select valves status (0/1)	Intermediate $CO_2$	0*	0	0	1	0
	High $CO_2$	0*	0	0	0	1
	Archive $CO_2$	0*	0	0	0	0
IRGA Val Gas Valve status (0/1)		0	1	1	1	1
IRGA Vent Va	lve status (0/1)	0	0	0	0	0

Notes:

- a. 1 = open valve, 0 = close valve.
- b.  $\Delta t = x \min + 2.5 \min$ , where x min is the purge time depending on the time length to reach steady-state. Max value for x is 5 min); 2.5 min is the time length using for trailing average after reach steady state.
- c. \*: The status in these cells could be 1 if G2131-I is at validation mode.

# Table 37. Cycling sequence for the Val Gas Select valves, IRGA Val Gas Valve, and IRGA Vent Valve during themonthly 'archive' validation of the LI840A IRGA

Validatio	n values	Sampling		Monthly vali	dation mode	starting time	
Validatio	n valves	Mode	0 Δt 2.4		2 <i>∆t</i>	3 ∆t	4 <i>∆t</i>
Isotopic CO <sub>2</sub>	Zero air	0	1	0	0	0	0
transfer standard	Low CO <sub>2</sub>	0*	0	1	0	0	0



span gas select valves status (0/1)	Intermediate CO <sub>2</sub>	0*	0	0	1	0	0
	High CO <sub>2</sub>	0*	0	0	0	1	0
	Archive $CO_2$	0*	0	0	0	0	1
IRGA Validation G status		0	1	1	1	1	1
IRGA Validation G Valve sta		0	0	0	0	0	0

Notes:

a. 1 = open valve, 0 = close valve.

b.  $\Delta t = x \min + 2.5 \min$ , where x min is the purge time depending on the time length to reach steady-state. Max value for x is 5 min); 2.5 min is the time length using for trailing average after reach steady state.

c. \*: The status in these cells could be 1 if G2131-I is at validation mode.

L0 data products for LI840A field calibration/validation or for G2131-I validation (DGD CD06640001, and DGD CD06640002) at 0.2 Hz can be found in Appendix 15.6.

## 12.3.4 G2131-I and L2130-I Field Validation

The validation of the LI840A, G2131-I and L2130-I analyzers should be performed periodically and independently without impacts to each other. The command and control structure for each of the G2131-I and L2130-I field validation processes are presented in the subsequent sections.

## 12.3.4.1 G2131-I Isotope Analyzer Validation (DGD CD06640001)

The G2131-I analyzer should undergo a routine validation at a frequency of **once every ~23 hours** using the CO<sub>2</sub> at 3 different concentrations from ~300 ppm to 600 ppm and with  $\delta^{13}$ C of -5 ‰ to -23 ‰, and at a lower frequency of once a month using the archiving CO<sub>2</sub> (~400 ppm). CO<sub>2</sub> gas standards at different concentrations will be routed through Val Gas Select valves, Validation Gas Manifold, a mass flow controller, the CO<sub>2</sub> Val Gas Valve, and CO<sub>2</sub> Sample Manifold prior to the analyzer.

During normal sampling operation, Val Gas Select valves should be closed. During validation mode, only one known CO<sub>2</sub> gas standard will be delivered at a time to the analyzer to avoid cross contamination. There will be 4 valves for 4 CO<sub>2</sub> gases. These valves are normally closed, but are activated to open in sequence during validation. The validation sequence should be from low CO<sub>2</sub> concentration to high CO<sub>2</sub> concentration. Validation with the archiving CO<sub>2</sub> will coincide with an instance of routine field validation. The valve for Zero air should be closed during G2131-I validation. However, the valve for Zero air should be open prior to instrument shut down to prevent the water vapor condensation inside the laser cavity. The zero air used to purge the G2131-I cavity during instrument shut down is the same zero air cylinder used for LI840A calibration/validation.

During normal sampling operation, the CO<sub>2</sub> Val Gas Valve should be closed. During field validation, the CO<sub>2</sub> Val Gas Valve will open to deliver the known CO<sub>2</sub> standard gas to the G2131-I analyzer. The flag status should be 1 for open, and 0 for closed. The flow rate should be controlled at **0.3 SLPM** using a mass flow controller.



The validation should occur every 23 hours. The validation should start at the end of a full sampling cycle that is closest to the 23-hour interval.

 $\Delta t$  is the time length needed to complete a validation using one standard gas. It should include the times for both settling (including purge, stabilization, solenoid switching) and measurement.

As currently designed,  $\Delta t$  is 10 min (including 2 min flushing time and 8 min averaging time). Therefore, to complete a full cycle of field validation for the G2131-I, it will take 40 minutes for a routine field validation, and it will take 50 minutes for a field validation to include the additional "archive" CO<sub>2</sub> standard.

Tables below show the command and control structure for the routine validation process and monthly "archive" validation, respectively.

Table 38. Cycling sequence for the Val Gas Select valves and the CO2 Val Gas Valve during routine field validationof G2131-I.

		Sampling	Routine vali	dation mode s	tarting time
Validatio	on valves	Mode	0	∆t	2 ∆t
	Zero Air	0	0	0	0
	Low $CO_2$	0*	1	0	0
Val Gas Select valves status (0/1)	Intermediate $CO_2$	0*	0	1	0
	High $CO_2$	0*	0	0	1
	Archive $CO_2$	0*	0	0	0
CO <sub>2</sub> Val Gas Va	alve status (0/1)	0	1	1	1

Notes:

1) 1 = open valve, 0 = close valve.

2)  $\Delta t = 10 \min$ 

3) \*: The status in these cells could be 1 if the LI840A is in validation mode.

**Table 39.** Cycling sequence for the Val Gas Select valves and the CO2 Val Gas Valve during the monthly 'archive'validation of G2131-I.

			Monthly validation mode starting time				
Validation valves		Mode	0	∆t	2 ∆t	3 ∆t	
	Zero air	0	0	0	0	0	
	Low $CO_2$	0*	1	0	0	0	
Val Gas Select valves status (0/1)	Intermediate CO <sub>2</sub>	0*	0	1	0	0	
	High CO <sub>2</sub>	0*	0	0	1	0	
	Archive $CO_2$	0*	0	0	0	1	



$CO_2$ Val Gas Valve status (0/1)	0	1	1	1	1	
-----------------------------------	---	---	---	---	---	--

Notes:

- 1) 1 = open valve, 0 = close valve.
- 2)  $\Delta t = 10 \min$
- 3) \*: The status in these cells could be 1 if LI840A is at validation mode.

L0 data products for G2131-I validation are presented under the section 12.3.3.

## 12.3.4.2 L2130-I Isotope Analyzer Routine Validation (CD06640001, CD06640002)

Validation of the H<sub>2</sub>O isotope analyzer should take place every 23 hours using zero air and liquid water standards prepared by NEON CVAL. Only one Job will be scheduled with a 23-hour interval, field technicians will have to restart this validation Job manually every four weeks (for 12-vial tray) while they are at the site or after the Job is finished. Otherwise, after the Job is finished, the L2130-I will continue doing ambient air sampling until the Job is manually started again. Therefore, there is no automatic control when the new validation process will start. It really depends on when the field technician will be at the field site. Given 23 hours validation interval, 45 vials will last longer than the 2 weeks of normal field technician visit schedule.

The validation process for this analyzer utilizes four valves (H<sub>2</sub>O Analyzer WLM Purge Valve, H<sub>2</sub>O Analyzer Zero Air Valve, H<sub>2</sub>O Manifold Zero Air Valve, and Vaporizer 3-way Valve), zero air gas, an Auto Sampler and Vaporizer. During the sampling model, the four valves should be closed to avoid zero air flow to the H<sub>2</sub>O Sample Manifold; and H<sub>2</sub>O Analyzer WLM Purge Valve, H<sub>2</sub>O Analyzer Zero Air Valve, and Vaporizer 3-way Valve should be open during the validation mode to allow the zero air to flow to the vaporizer and analyzer. While the H<sub>2</sub>O Manifold Zero Air Valve is only opened before the instrument is shut down to flush the laser cavity to prevent water vapor condensation. The flag status should be 1 for open and 0 for closed.

**Table 40**. Command and control for  $H_2O$  Analyzer WLM Purge Valve,  $H_2O$  Analyzer Zero Air Valve, Vaporizer 3way Valve and  $H_2O$  Manifold Zero Air Valve during routine field validation of L2130-I (1 = open valve, 0 = close)

valve.)

Par	rameter	Sampling mode	Field validation mode	Notes
H <sub>2</sub> O Analyzer WLM Purge	$H_2O$ Analyzer WLM Purge Valve status (0/1)		1	
H <sub>2</sub> O Analyzer Zero Air Va	llve status (0/1)	0	1	
Vaporizer 3-way Valve	Inlet port 1	1	0	Connect to H <sub>2</sub> O Sample Manifold
status (0/1)*	Inlet port 2	0	1	Connect to a Tee between
				vaporizer purge port and $H_2O$
				Analyzer Zero Air Valve
H <sub>2</sub> O Manifold Zero Air Va	lve status (0/1)	0	0	Only open before instrument
				shut down to flush $H_2O$ Sample
				manifold and L2130-I laser cavity

\* When this 3-way valve is inactive (flag = 0), port1 is NO, and port 2 is NC, this is for sampling air to go through; when this 3-way valve is active (flag = 1), port 1 is closed, and port 2 is open, this is for validation gas to go through.

L0 data streams from IRGA Sample Valves at 0.2 Hz (DGD CD06640001, CD06640002, and CA10210000) can be found in Appendix 15.6.



# 12.3.4.3 L2130-I Isotope Humidity Dependency Validation

Isotopic analysis using CRDS instruments is sensitive to humidity. The isotope dependency of each L2130-I to humidity will be characterized at CVAL prior to deployment, and should be re-characterized at the field site prior to operation, and annually thereafter at the same time period when annual field calibration is undertaken. The functions of isotope dependency on humidity will be used to post correct the data.

Field technicians will need to start this process manually while they are at the field site. It will typically last for 3 days. The Jobs for this validation will be pre-coded in the L2130-I analyzer computer by CVAL, but should be triggered and fine-tuned by field technicians manually. CVAL will provide water standards for this task, and also provide field technicians the instructions to conduct this validation as well as provide the templates for data processing.

During this validation, the valve settings and data products will be identical to the routine validation.

## 12.3.4.4 L2130-I Annual field calibration and drift test

According to current plan, the L2130-I will not return to CVAL for annual calibration, unless absolutely needed. Instead, annual accuracy test, calibration slope test and drift test will be performed at the field site to quantify the instrument accuracy and drift.

This annual field calibration of the L2130-I should be done during the time period when the G2131-I is sent back to CVAL for lab calibration and profile system maintenance occurs. Field technicians need to start this process manually while they are at the site. It typically will last for a week. The Jobs for this validation will be pre-coded in the L2130-I analyzer computer by CVAL, but should be triggered and fine-tuned by the field technicians. CVAL will provide water standards for this task, and also provide field technicians with instructions to conduct this validation as well as provide the templates for data processing.

During this field calibration, the valve settings and data products will be identical to the routine validation. However, the sample line pump could stop pulling air samples into the sample lines during this L2130-I field calibration period as only reference standards will be measured. Field techs should use this same time period to conduct maintenance to sample line pumps, PICARRO pumps, the autosampler, vaporizer, and have the G2131-I analyzer returned back to CVAL for annual calibration. This will maximize the profile data product availability.

Leak tests should be conducted after maintenance, (see AD [05]).

## 12.3.5 Error handling

N/A

# 12.3.6 Sensor controls specification

N/A



# **13 ASSEMBLY INTEGRATION**

N/A

## **14 POTENTIAL FUTURE DEVELOPMENT**

There was a suggestion from the science community (Dave Noone, Todd Downson) that the profile stable isotopic measurements should not always sample from the top level to the bottom level of the profile. Instead, to avoid systematic bias, at least 3 different sampling cycle sequences should be adapted and changed periodically (say, every few days or few weeks). We only include the sequence for the top-to-bottom scenario in this document to simplify the process. Once this profile system is successfully implemented and data processing is developed, other sampling cycle sequences can be considered per the recommendations from the science community. This command, control and configuration document should be revised accordingly.


There was another suggestion from the science community that a reference level should be used for the G2131-I and L2130-I profile measurement. Because it takes over one hour to finish a complete sampling cycle for a site with 8 measurement levels, the stable isotope signal may not be suitable to construct a profile. So the suggestion is to include a measurement at a single reference level between measurements made at each measurement level so that the measurements over time can have a common comparable reference. The level that is designated to be the reference level should be the level where atmospheric conditions (i.e. relative humidity, temperature, CO2 concentrations, isotope composition etc.) have been found to be least variable. The top most level was suggested as it is above canopy in the well-mixed surface layer. However, we decided not to include this reference measurement in the current design due to following reasons:

- 1. Adding a reference level to the measurements will reduce the G2131-I and L2130-I complete sampling cycles by half, which means longer time interval apart between two neighbor cycles, making it less suitable for developing a vertical profile;
- 2. The G2130-I and L2130-I should never take the measurements at the same measurement level at the same time as the LI840A, and the G2130-I and L2130-I take precedence over LI840A at each measurement level. With G2130-I and L2130-I measurements being repeated frequently at a single reference level (especially at the top level), this will limit LI840A measurements of CO<sub>2</sub>/H<sub>2</sub>O concentrations at that level, thus impacting the subsequent CO<sub>2</sub>/H<sub>2</sub>O storage term calculations;
- **3.** Higher level data products for stable isotope measurements are currently unplanned. Thus it is unknown how the data will be used to develop higher data products, and if the reference level will be useful or not; since flux and storage term measurements and calculations have a more mature methodology, the priority is given to these storage measurements and calculations over the stable isotope measurements by not including a reference levels for stable isotope measurements at this time, but this can be reassessed in the future as needed.



# **15 APPENDIX & BIBLIOGRAPHY**

### 15.1 EC profile assembly Schematic

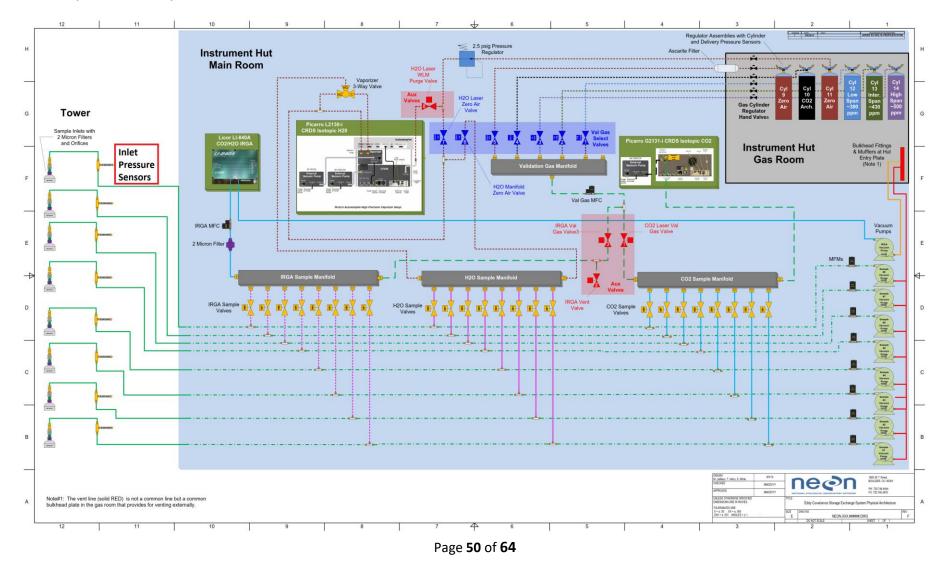



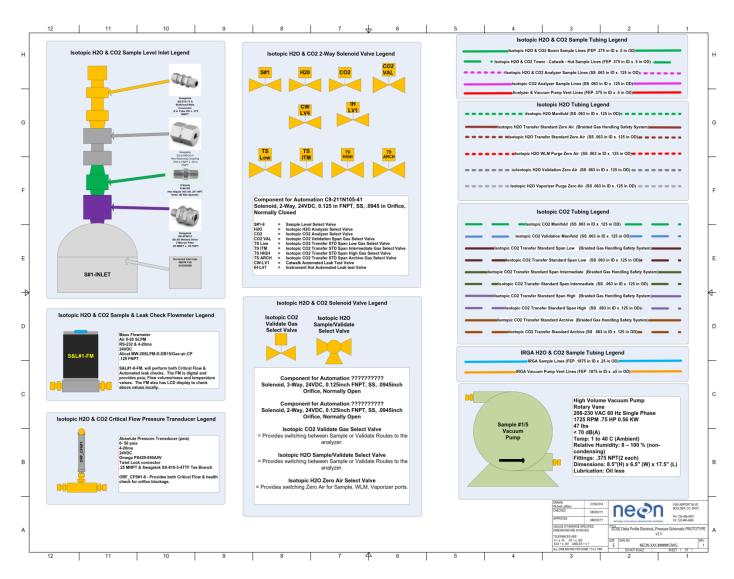


Figure 2. Schematic of the Eddy Covariance Storage Exchange Profile System

Page 51 of 64



### 15.2 Instrument status (INST\_STATUS) information

PICARRO The World's Highest Performing and Easiest to Use Analyzers 3105 Patrick Henry Drive Santa Clara, California 95054

408.962.3900 > tel 408.962.3200 > fax

# What does Instrument Status ("INST\_STATUS") column in G2000 data log mean? (most of the time its value = 963)

Usually when the instrument is under operational condition and taking measurements, the instrument status value should be 963 (= Bit 0 (ready) AND Bit 1 (measurement active) AND Bit 6 (gas flowing) AND Bit 7 (pressure locked) AND Bit 8 (cavity temperature locked) AND Bit 9 (warm box temperature locked)).

Additional information on each bit follows:

Bit 0 – Ready: Gas measurements are possible as:

- The instrument is warmed up
- The conditions in the sample cavity are acceptable (pressure and temperature controlled within range)
- The instrument is not busy doing something else.

Bit 1 – Measurement inactive/active: is set LOW when the measurement system is inactive, HIGH when measurements are in progress.

If bits 0 and 1 are both set it means the instrument is currently measuring.

Bit 2 – Error in buffer: is set whenever a system error is present in the error buffer. This bit is not cleared until the buffer has been emptied. In general, errors that occur exclusively in the command interface (error codes 1000-1999) do not result in an error being logged in the error queue.

Bit 6 – Gas flowing: is set LOW unless the inlet and outlet valve are both open.

Bit 7 – Pressure locked: is set LOW when the pressure is outside of acceptable operating range, OR gas is not flowing. If the pressure is unable to lock for an extended period when it should, this can be the result of an over or under pressure at the sample input, or a loss of vacuum.

Bit 8 – Cavity temperature locked: is set LOW when the cavity temperature is outside of acceptable operating range.

Bit 9 – Warm box temperature locked: is set LOW when the warm box temperature is outside of acceptable operating range.

Bit 13 – Starting up: is set HIGH immediately after the instrument powers up. This bit clears when the instrument has completed the warmup time (instrument is temperature stabilized) and should then never be set again until the instrument is restarted.



PICARRO The World's Highest Performing and Easiest to Use Analyzers

3105 Patrick Henry Drive Santa Clara, California 95054

408.962.3900 > tel 408.962.3200 > fax

Bit 14 – System Error: This bit will remain HIGH until error condition no longer exists. All error conditions that cause this bit to be set will also generate an error entry in the error log (and set bit 2 high). However, it is possible for this bit (bit 14) to be high when bit 2 is LOW. This can happen when a persistent error condition exists, the error log is read (clearing bit 2), but the error condition still exists. This bit is not set for errors generated at the RS-232 interface (error codes 1000-1999)



## 15.3 List of files in the analyzers that need to be copied and backed up at HQ

All files in the folders listed in the two tables below should be copied (assume manually using CDs) and backed up at HQ periodically.

**Table 41.** Files in G2130-I analyzers that need to be copied and backed up at HQ

C:\userdata\

C:\Picarro\G2000\AppConfig\; (all directories, not just Config) Will be static except for updates. C:\Picarro\G2000\Log\Archive\DataLog\_Private\ C:\Picarro\G2000\Log\Archive\EventLogs\ C:\Picarro\G2000\Log\Archive\RDF\

C:\Picarro\G2000\Log\Archive \WBCAL\ C:\Picarro\G2000\InstrConfig\Calibration\InstrCal ;(Will be static except for updates).

 Table 42. Files in L2130-I analyzers that need to be copied and backed up at HQ

c:\userdata\ c:\isotopedata\

C:\Picarro\G2000\AppConfig\; (all directories, not just Config) Will be static except for updates. C:\Picarro\G2000\Log\Archive\DataLog\_Private\ C:\Picarro\G2000\Log\Archive\EventLogs\ C:\Picarro\G2000\Log\Archive\RDF\

C:\Picarro\G2000\Log\Archive \WBCAL\ C:\Picarro\G2000\InstrConfig\Calibration\InstrCal ;(Will be static except for updates).



# 15.4 G2131-I and L2130-I power start up sequence flow chart

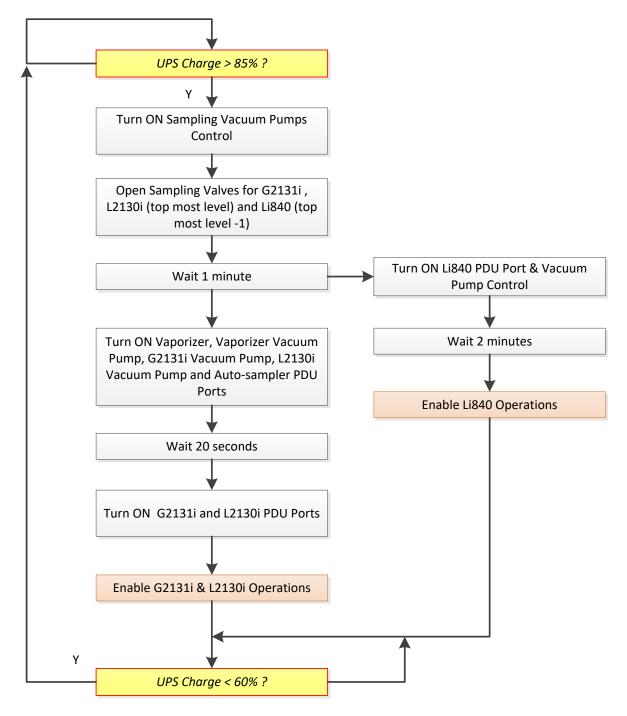


Figure 3. Flow chart for G2131-I and L2130-I power start up sequence



Title: NEON Sensor Command, Control and Config Storage Exchange	Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

## 15.5 G2131-I and L2130-I power shut down sequence flow chart

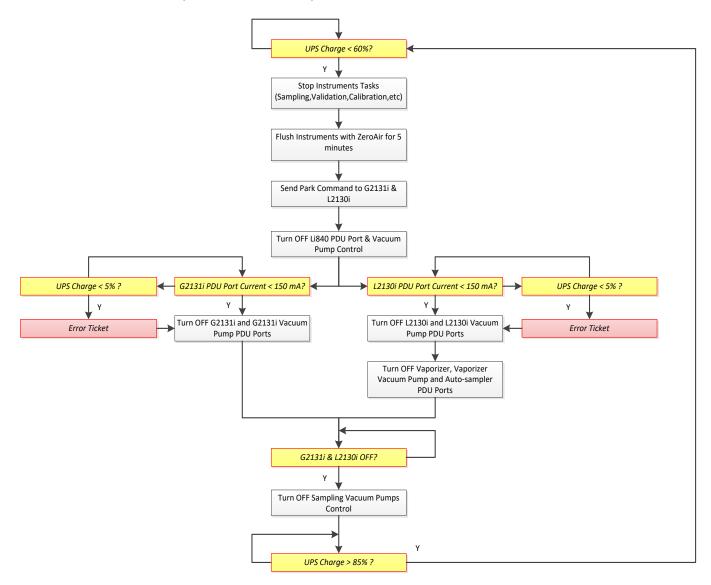


Figure 4. Flow chart for G2131-I and L2130-I power shut down sequence



Revision: D

# 15.6 List of Level 0 data product

NEON Doc. #: NEON.DOC.000465

### Table 43. List of Level 0 data products for Eddy Covariance Storage Exchange Subsystem

DGD Agile PN	DPName	DPNumber	dpID	fieldName	description	dataTyp e	units	Acquisition frequency (Hz)
		NEON.DOM.SITE.DP0.00105.001.	NEON.DOM.SITE.DP0.		Total wet mole fraction (fw) of CO2 in		micromolesPerMol	
	profIrga	02316.HOR.VER.000	00105.001	fwMoleCO2	the air	real	е	1
		NEON.DOM.SITE.DP0.00105.001.	NEON.DOM.SITE.DP0.		Total wet mole fraction (fw) of water			1
	profIrga	02348.HOR.VER.000	00105.001	fwMoleH2O	vapor (H2O) in the air	real	millimolesPerMole	T
		NEON.DOM.SITE.DP0.00105.001.	NEON.DOM.SITE.DP0.					1
6000240	profIrga	02349.HOR.VER.000	00105.001	tempCell	Temperature (temp) of the optical cell	real	celsius	1
CD08340		NEON.DOM.SITE.DP0.00105.001.	NEON.DOM.SITE.DP0.					1
000	profIrga	02350.HOR.VER.000	00105.001	presCell	Pressure (pres) of the optical cell	real	kilopascal	1
	profIrga	NEON.DOM.SITE.DP0.00105.001. 02189.HOR.VER.000	NEON.DOM.SITE.DP0. 00105.001	asrpCO2	Electromagnetic absorptance (asrp) in the carbondioxide (CO2) absorption band	real	dimensionless	1
	profirga	NEON.DOM.SITE.DP0.00105.001. 02184.HOR.VER.000	NEON.DOM.SITE.DP0. 00105.001	asrpH2O	Electromagnetic absorptance (asrp) in the water vapor (H2O) absorption band	real	dimensionless	1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02306.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	instStat	Instrument status bit (963 = good, other values indicate either temperature or pressure is not stable)	integer	NA	~1
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.					~1
	CO2Iso	02307.HOR.VER.000	00102.001	presCavi	Pressure of instrument cavity	real	torr	
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02308.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	tempCavi	Temperature of instrument cavity	real	celsius	~1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02309.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	tempDas	Temperature inside chassis	real	celsius	~1
0330600 000	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02310.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	tempEtal	Temperature of Etalon	real	celsius	~1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02311.HOR.VER.000	NEON.DOM.SITE.DPO. 00102.001	tempWarmBox	Temperature of the "warm box" - the temperature-controlled electronics and wavelength monitor chamber	real	celsius	~1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02312.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	posiMPV	State of external rotary valve (if attached), 0-n for an n-port rotary valve	real	NA	~1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02313.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	valvOutl	Digitizer value of outlet proportional valve, max open = 65000, closed = 0	real	NA	~1
	CO2Iso	NEON.DOM.SITE.DP0.00102.001. 02314.HOR.VER.000	NEON.DOM.SITE.DP0. 00102.001	valvSol	State of external solenoid valves (if attached)	real	NA	~1



<i>Title</i> : NEON Sensor Command, Control and Config Storage Exchange	Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Identity of the spectrum being collected at a point in time; used to identify gas			~
CO2Iso	02315.HOR.VER.000	00102.001	specID	species being analyzed	real	NA	
02130	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DPO.	зрести	Total wet mole fraction (fw) of CO2 in	Teal	micromolesPerMol	
CO2Iso	02316.HOR.VER.000	00102.001	fwMoleCO2	the air	real	e	~
02150	02310.HOK.VER.000	00102.001	TWIVIOIECOZ	Dry mole fraction (fd) on molar basis	Teal	e	
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		(Mole) of carbondioxide (CO2),		micromolesPerMol	~
CO2Iso	02191.HOR.VER.000	00102.001	fdMoleCO2	synonymous with mixing ratio	real	e	
02150			TUIVIOIECOZ		Teal	-	
CO21	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DPO.	f. Male12002	Total wet mole fraction (fw) of 12CO2 in		micromolesPerMol	~
CO2Iso	02317.HOR.VER.000	00102.001	fwMole12CO2	the air	real	e	
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DPO.		Dry molar fraction (fd) of 12CO2 in the		micromolesPerMol	~
CO2Iso	02318.HOR.VER.000	00102.001	fdMole12CO2	air	real	е	
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Total wet mole fraction (fw) of 13CO2 in		micromolesPerMol	~
CO2Iso	02319.HOR.VER.000	00102.001	fwMole13CO2	the air	real	е	
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Dry molar fraction (fd) of 13CO2 in the		micromolesPerMol	~
CO2Iso	02320.HOR.VER.000	00102.001	fdMole13CO2	air	real	е	
				Measure of the ratio of stable isotopes			
				13C:12C in CO2, relative to the Vienna			~
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Pee Dee Belemnite with 2 minute box			
CO2Iso	02321.HOR.VER.000	00102.001	2Mind13CO2	averaging	real	permill	
				Measure of the ratio of stable isotopes			
				13C:12C in CO2, relative to the Vienna			~
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Pee Dee Belemnite with 30 second box			
CO2Iso	02322.HOR.VER.000	00102.001	30Secd13CO2	averaging	real	permill	
				Measure of the ratio of stable isotopes			
				13C:12C in CO2, relative to the Vienna			~
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Pee Dee Belemnite with 5 minute box			~
CO2Iso	02323.HOR.VER.000	00102.001	5Mind13CO2	averaging	real	permill	
				Measure of the ratio of stable isotopes			
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		13C:12C in CO2, relative to the Vienna			~
CO2Iso	02324.HOR.VER.000	00102.001	d13CO2	Pee Dee Belemnite	real	permill	
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.	percentFwMoleH	Total wet mole fraction (fw) in percent			
CO2Iso	02325.HOR.VER.000	00102.001	20	of water vapor (H2O) in the air	real	percent	~
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.	2MinCO2IsoRati	The isotopic ratio of 13CO2/12CO2 with			
CO2Iso	02326.HOR.VER.000	00102.001	0	2 minute box averaging	real	dimensionless	~
	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.	30SecCO2IsoRati	The isotopic ratio of 13CO2/12CO2 with			
CO2Iso	02327.HOR.VER.000	00102.001	0	30 seconds box averaging	real	dimensionless	~
002130	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DPO.	5MinCO2IsoRati	The isotopic ratio of 13CO2/12CO2 with			
	02328.HOR.VER.000	00102.001	0	5 minute box averaging	real	dimensionless	~
CO2lso						annensionness	
CO2Iso	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		The isotopic ratio of 13CO2/12CO2			



<i>Title</i> : NEON Sensor Command, Control and Config Storage Exchange	uration (C3) Document: Eddy Covariance	Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

	r		1	r		r		
					Total molar fraction of methane (CH4) in			
					the air; used for correction of the			~1
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		isotopic CO2 measure for methane		micromolesPerMol	-
	CO2Iso	02330.HOR.VER.000	00102.001	fwMoleCH4	crosstalk	real	е	
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		Dry molar fraction of methane (CH4) in		micromolesPerMol	~1
	CO2Iso	02331.HOR.VER.000	00102.001	fdMoleCH4	the air	real	e	T
					High precision total molar fraction of			
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		methane (CH4) in the air based on the		micromolesPerMol	~1
	CO2Iso	02332.HOR.VER.000	00102.001	fwMoleHPCH4	12CH4 peak	real	е	
	-				High precision dry molar fraction of			
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DPO.		methane (CH4) in the air based on the		micromolesPerMol	~1
	CO2Iso	02333.HOR.VER.000	00102.001	fdMoleHPCH4	12CH4 peak	real	e	
					Peak height of H2O line, peak height of			
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		the H2O feature used for the H2O		partsPerBillionPerC	~1
	CO2lso	02334.HOR.VER.000	00102.001	peakHeigH2O	concentration	real	entimeter	-
	002.00		00101.001	pediareignizo	Maximum of the spline fit to the CH4			
		NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.		line, used to calculate methane		partsPerBillionPerC	~1
	CO2lso	02335.HOR.VER.000	00102.001	spliFitCH4	concentration	real	entimeter	-
	02130	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.	spin iterit	concentration	Tear	partsPerBillionPerC	
	CO2Iso	02336.HOR.VER.000	00102.001	peakHeig12C	Peak height of 12C line	real	entimeter	~1
	02150	NEON.DOM.SITE.DP0.00102.001.	NEON.DOM.SITE.DP0.	peakileigize	Feak height of 12C line	icai	partsPerBillionPerC	
	602144			nanklinin12C	Deals haight of 120 line			~1
	CO2Iso	02337.HOR.VER.000	00102.001	peakHeig13C	Peak height of 13C line	real	entimeter	
					Instrument status bit (963 = good, other			
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		values indicate either temperature or			~1
	H2OIso	02306.HOR.VER.000	00103.001	instStat	pressure is not stable)	integer	NA	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.					~1
	H2OIso	02307.HOR.VER.000	00103.001	presCavi	Pressure of instrument cavity	real	torr	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.					~1
	H2OIso	02308.HOR.VER.000	00103.001	tempCavi	Temperature of instrument cavity	real	celsius	-
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		Temperature of the "warm box" - the			
0328050	H2OIso	02311.HOR.VER.000	00103.001	tempWarmBox	temperature-controlled electronics and	real	celsius	~1
0328030		02311.HOK.VEK.000	00103.001		wavelength monitor chamber			
000	H2OIso	NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.	town	Tana antina incida abaasia	maal	celsius	~1
	HZUISO	02309.HOR.VER.000	00103.001	tempDas	Temperature inside chassis	real	ceisius	1
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.					
	H2OIso	02310.HOR.VER.000	00103.001	tempEtal	Temperature of Etalon	real	celsius	~1
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		State of external rotary valve (if			~1
	H2OIso	02312.HOR.VER.000	00103.001	posiMPV	attached), 0-n for an n-port rotary valve	real	NA	-
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		Digitizer value of outlet proportional			~1
	H2OIso	02313.HOR.VER.000	00103.001	valvOutl	valve , max open = $65000$ , closed = 0	real	NA	~1
L								



Title: NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017	
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D	

г – т					Chate of automal colour aid upluss if			
					State of external solenoid valves if			
					attached, as a decimal representation of			
					valves 1-6 where each valve is a binary			~1
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		bit (e.g., valve 1 = 1, valve 2 = 2, valve 3			
	H2OIso	02338.HOR.VER.000	00103.001	valvMask	= 4, etc. and the values are added)	real	NA	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.	ppmvFwMoleH2	Total wet mole fraction (fw) of water		micromolesPerMol	~1
	H2OIso	02339.HOR.VER.000	00103.001	0	vapor (H2O) in the air	real	е	T
					Measure of the ratio of stable isotopes			
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		180:160 in H2O, relative to the Vienna			~1
	H2OIso	02369.HOR.VER.000	00103.001	d180Water	Standard Mean Ocean Water	real	permill	
İ					Measure of the ratio of stable isotopes			
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		2H:1H in H2O, relative to the Vienna			~1
	H2OIso	02370.HOR.VER.000	00103.001	d2HWater	Standard Mean Ocean Water	real	permill	-
	1120130	0237011011172110000	00103.001	azinwater	Total molar fraction of methane (CH4) in	real	permi	
					the air. Methane measurement used for			
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		correction of the isotopic CO2 measure		micromolesPerMol	~1
	H2Olso	02330.HOR.VER.000	00103.001	fwMoleCH4	for methane crosstalk	rool		
	HZUISU	02330.HOR.VER.000	00103.001	TWIVIOIECH4	Signal to indicate if the instrument is	real	e	
					-			a:1
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DPO.	105	processing the data for N2 gas or			~1
	H2OIso	02340.HOR.VER.000	00103.001	N2Flag	background air. 0=air mode, 1=N2 mode	real	NA	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		Change in linear term of fitted baseline		partsPerBillionPerC	
	H2OIso	02342.HOR.VER.000	00103.001	slopShift	relative to the empty cavity baseline	real	entimeter	~1
			00103.001		measured at the factory		entimeter	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		Change in constant term of fitted		partsPerBillionPerC	
	H2OIso	02341.HOR.VER.000	00103.001	baseShift	baseline relative to the empty cavity	real	entimeter	~1
		02341.HOR.VER.000	00103.001		baseline measured at the factory		entimeter	
		NEON.DOM.SITE.DP0.00103.001.	NEON.DOM.SITE.DP0.		Root mean square (RMS) residuals of the		partsPerBillionPerC	~1
	H2OIso	02343.HOR.VER.000	00103.001	resiRMS	least-squares fit	real	entimeter	1
		NEON.DOM.SITE.DP0.00104.001.	NEON.DOM.SITE.DP0.					
	hutEnv	02344.HOR.VER.000	00104.001	tempHut	Temperature in the instrument hut	real	celsius	1
İ		NEON.DOM.SITE.DP0.00104.001.	NEON.DOM.SITE.DP0.	•				
0347780	hutEnv	02345.HOR.VER.000	00104.001	RHHut	Humidity in the instrument hut	real	percent	1
000		NEON.DOM.SITE.DP0.00104.001.	NEON.DOM.SITE.DP0.		Barometric pressure in the instrument			
	hutEnv	02346.HOR.VER.000	00104.001	baroPresHut	hut	real	kilopascal	1
	Indeent	NEON.DOM.SITE.DP0.00104.001.	NEON.DOM.SITE.DPO.	barorrestrat	Mixing ratio of water vapor (H2O) in the	i cui	kilopuseul	-
	hutEnv	02347.HOR.VER.000	00104.001	H2OMixRatioHut	instrument hut	real	gramsPerKilogram	1
	HULLIN	02347.1101.1211.000	00104.001		Pressure (pres), measured as differential	icai	Brailist CINIUgidIII	1
CA07150					against ambient pressure, synonymous			
000	(D) 1/1/D =				with gage (Gage) pressure (at sea level			
	profPresValiRegTan	NEON.DOM.SITE.DP0.00111.001.	NEON.DOM.SITE.DPO.		the gage pressure equals total pressure			
	k	02196.HOR.VER.000	00111.001	presGage	minus 101.325 kPa)	real	kilopascal	1



Title: NEON Sensor Command, Control and Configue Storage Exchange	uration (C3) Document: Eddy Covariance	Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

				I	Pressure (pres), measured as differential		[	1
					u <i>n</i>			
CA07140					against ambient pressure, synonymous			
000					with gage (Gage) pressure (at sea level			
		NEON.DOM.SITE.DP0.00110.001.	NEON.DOM.SITE.DP0.	-	the gage pressure equals total pressure			
	profPresValiRegDel	02196.HOR.VER.000	00110.001	presGage	minus 101.325 kPa)	real	kilopascal	1
					Pressure (pres), measured as differential			
CA08830					against ambient pressure, synonymous			
000					with gage (Gage) pressure (at sea level			
000		NEON.DOM.SITE.DP0.00109.001.	NEON.DOM.SITE.DP0.		the gage pressure equals total pressure			
	profPresInlet	02196.HOR.VER.000	00109.001	presGage	minus 101.325 kPa)	real	kilopascal	1
					Flow rate (frt) at National Institute of			
					Standards and Technology standard			
					conditions (0, which are 293.15 K,			
		NEON.DOM.SITE.DP0.00108.001.	NEON.DOM.SITE.DP0.		101.325 kPa), synonymous with mass			
	profMfm	01951.HOR.VER.000	00108.001	frt0	flow rate	real	litersPerMinute	1
					Flow rate (frt) at site temperature and			
0044505		NEON.DOM.SITE.DP0.00108.001.	NEON.DOM.SITE.DP0.		pressure, synonymous with volumetric			
0341530	profMfm	01950.HOR.VER.000	00108.001	frt	flow rate	real	litersPerMinute	1
000	· ·				Pressure (pres), measured as			
					atmospheric (Atm) pressure,			
					synonymous with absolute pressure or			
		NEON.DOM.SITE.DP0.00108.001.	NEON.DOM.SITE.DP0.		total pressure (at sea level the standard			
	profMfm	01948.HOR.VER.000	00108.001	presAtm	atmospheric pressure is 101.325 kPa)	real	kilopascal	1
		NEON.DOM.SITE.DP0.00108.001.	NEON.DOM.SITE.DP0.					
	profMfm	01949.HOR.VER.000	00108.001	temp	Temperature (temp)	real	celsius	1
	- F -			P	Flow rate (frt) set point (Set) at National			
					Institute of Standards and Technology			
					standard conditions (0, which are 293.15			
		NEON.DOM.SITE.DP0.00107.001.	NEON.DOM.SITE.DP0.		K, 101.325 kPa), synonymous with mass			
	profMfcVali	01952.HOR.VER.000	00107.001	frtSet0	flow rate set point	real	litersPerMinute	1
	pronviicium		00107.001		Flow rate (frt) at National Institute of	i cui		±
					Standards and Technology standard			
					conditions (0, which are 293.15 K,			
0341500		NEON.DOM.SITE.DP0.00107.001.	NEON.DOM.SITE.DP0.		101.325 kPa), synonymous with mass			
000	profMfcVali	01951.HOR.VER.000	00107.001	frt0	flow rate	real	litersPerMinute	1
	pronvincyall	01331.1101.111.000	00107.001	110	Flow rate (frt) at site temperature and	i cai	ILCI SF CI WIIIIULE	1
		NEON.DOM.SITE.DP0.00107.001.	NEON.DOM.SITE.DP0.		pressure, synonymous with volumetric			
	profMfcVali			frt		real	liters Der Minute	1
	pronviicvan	01950.HOR.VER.000	00107.001		flow rate	real	litersPerMinute	1
					Pressure (pres), measured as			
					atmospheric (Atm) pressure,			
					synonymous with absolute pressure or			
	60.05 × 6.11	NEON.DOM.SITE.DP0.00107.001.	NEON.DOM.SITE.DPO.		total pressure (at sea level the standard			
	profMfcVali	01948.HOR.VER.000	00107.001	presAtm	atmospheric pressure is 101.325 kPa)	real	kilopascal	1



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

			NEON.DOM.SITE.DP0.					
	profMfcVali	NEON.DOM.SITE.DP0.00107.001. 01949.HOR.VER.000	00107.001	temp	Temperature (temp)	real	celsius	1
	pronvirevan	01949.HOK.VEK.000	00107.001	temp	Flow rate (frt) set point (Set) at National	Teal	ceisius	L
					Institute of Standards and Technology			
					standard conditions (0, which are 293.15			
		NEON.DOM.SITE.DP0.00106.001.	NEON.DOM.SITE.DP0.		K, 101.325 kPa), synonymous with mass			
	profMfcSamp	01952.HOR.VER.000	00106.001	frtSet0	flow rate set point	real	litersPerMinute	1
	prontitiodanip		001001001		Flow rate (frt) at National Institute of			-
					Standards and Technology standard			
					conditions (0, which are 293.15 K,			
		NEON.DOM.SITE.DP0.00106.001.	NEON.DOM.SITE.DP0.		101.325 kPa), synonymous with mass			
0341570	profMfcSamp	01951.HOR.VER.000	00106.001	frt0	flow rate	real	litersPerMinute	1
000					Flow rate (frt) at site temperature and			
		NEON.DOM.SITE.DP0.00106.001.	NEON.DOM.SITE.DP0.		pressure, synonymous with volumetric			
	profMfcSamp	01950.HOR.VER.000	00106.001	frt	flow rate	real	litersPerMinute	1
					Pressure (pres), measured as			
					atmospheric (Atm) pressure,			
					synonymous with absolute pressure or			
		NEON.DOM.SITE.DP0.00106.001.	NEON.DOM.SITE.DP0.		total pressure (at sea level the standard			
	profMfcSamp	01948.HOR.VER.000	00106.001	presAtm	atmospheric pressure is 101.325 kPa)	real	kilopascal	1
		NEON.DOM.SITE.DP0.00106.001.	NEON.DOM.SITE.DP0.					
	profMfcSamp	01949.HOR.VER.000	00106.001	temp	Temperature (temp)	real	celsius	1
CD07150		NEON.DOM.SITE.DP0.00112.001.	NEON.DOM.SITE.DP0.					
000	profPumpSmp	02351.HOR.VER.000	00112.001	pumpVoltage	Voltage provided to pump	real	volt	~0.2
		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 1 command (0 = close, 1			
	profSnd	02360.HOR.VER.000	00113.001	valvCmd1	= open)	integer	NA	0.2
		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 2 command (0 = close, 1			
	profSnd	02361.HOR.VER.000	00113.001	valvCmd2	= open)	integer	NA	0.2
		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 3 command (0 = close, 1			
	profSnd	02362.HOR.VER.000	00113.001	valvCmd3	= open)	integer	NA	0.2
CD06640		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 4 command (0 = close, 1			
001	profSnd	02364.HOR.VER.000	00113.001	valvCmd4	= open)	integer	NA	0.2
001		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 5 command (0 = close, 1			
	profSnd	02365.HOR.VER.000	00113.001	valvCmd5	= open)	integer	NA	0.2
		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 6 command (0 = close, 1			
	profSnd	02366.HOR.VER.000	00113.001	valvCmd6	= open)	integer	NA	0.2
		NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 7 command (0 = close, 1			
	profSnd	02367.HOR.VER.000	00113.001	valvCmd7	= open)	integer	NA	0.2
	<b>a</b> - 1	NEON.DOM.SITE.DP0.00113.001.	NEON.DOM.SITE.DP0.		Solenoid valve 8 command (0 = close, 1			
	profSnd	02368.HOR.VER.000	00113.001	valvCmd8	= open)	integer	NA	0.2
CD06640		NEON.DOM.SITE.DP0.00114.001.	NEON.DOM.SITE.DP0.		Solenoid valve 1 command (0 = close, 1			
002	profSndAux	02360.HOR.VER.000	00114.001	valvCmd1	= open)	integer	NA	0.2



<i>Title</i> : NEON Sensor Command, Control and Configuration (C3) Document: Eddy Covariance Storage Exchange		Date: 06/28/2017
NEON Doc. #: NEON.DOC.000465	Author: H. Luo/N. Durden	Revision: D

	profSndAux	NEON.DOM.SITE.DP0.00114.001.	NEON.DOM.SITE.DPO.	valvCmd2	Solenoid valve 2 command (0 = close, 1	integer	NA	0.2
		02361.HOR.VER.000 NEON.DOM.SITE.DP0.00114.001.	00114.001 NEON.DOM.SITE.DPO.		= open) Solenoid valve 3 command (0 = close, 1	integer		-
	profSndAux	02362.HOR.VER.000	00114.001	valvCmd3	= open)	integer	NA	0.2
	profSndAux	NEON.DOM.SITE.DP0.00114.001. 02364.HOR.VER.000	NEON.DOM.SITE.DP0. 00114.001	valvCmd4	Solenoid valve 4 command (0 = close, 1 = open)	integer	NA	0.2
CA10210 000	profSndVapor	NEON.DOM.SITE.DP0.00115.001. 02352.HOR.VER.000	NEON.DOM.SITE.DP0. 00115.001	valvStat1	Solenoid valve 1 status (0 = close, 1 = open)	integer	NA	0.2
	profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02850.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d2HWaterLow	Measure in the low standard of the ratio of stable isotopes 2H:1H in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
	profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02851.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d180WaterLow	Measure in the low standard of the ratio of stable isotopes 180:160 in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
0361660	profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02852.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d2HWaterMed	Measure in the medium standard of the ratio of stable isotopes 2H:1H in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
000	profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02853.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d180WaterMed	Measure in the medium standard of the ratio of stable isotopes 180:160 in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
	 profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02854.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d2HWaterHigh	Measure in the high standard of the ratio of stable isotopes 2H:1H in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
	profRefeH2oVali	NEON.DOM.SITE.DP0.00120.001. 02855.HOR.VER.000	NEON.DOM.SITE.DP0. 00120.001	d18OWaterHigh	Measure in the high standard of the ratio of stable isotopes 180:160 in H2O, relative to the Vienna Standard Mean Ocean Water	real	permill	1
	profGasCyl	NEON.DOM.SITE.DP0.00118.001. 02191.HOR.VER.000	NEON.DOM.SITE.DP0. 00118.001	fdMoleCO2	Dry mole fraction (fd) on molar basis (Mole) of carbondioxide (CO2), synonymous with mixing ratio	real	micromolesPerMol e	1
0353710 000	profGasCyl	NEON.DOM.SITE.DP0.00118.001. 02324.HOR.VER.000	NEON.DOM.SITE.DP0. 00118.001	d13CO2	Measure of the ratio of stable isotopes 13C:12C in CO2, relative to the Vienna Pee Dee Belemnite	real	permill	1
	profGasCyl	NEON.DOM.SITE.DP0.00118.001. 02318.HOR.VER.000	NEON.DOM.SITE.DP0. 00118.001	fdMole12CO2	Dry molar fraction (fd) of 12CO2 in the air	real	micromolesPerMol e	1



	NEON.DOM.SITE.DP0.00118.001.	NEON.DOM.SITE.DP0.		Dry molar fraction (fd) of 13CO2 in the		micromolesPerMol	
profGasCyl	02320.HOR.VER.000	00118.001	fdMole13CO2	air	real	е	1

## 15.7 Bibliography

- Installation: L2130-I or L2120-i Analyzer and its Peripherals User's Manual. Revision B, 8-7-2012. Picarro, Inc. 3105 Patrick Henry Dr. Santa Clara California, 95054 USA
- Operation, Data Analysis, Maintenance, Troubleshooting | L2130-I or L2120-i analyzer and its Peripherals - User's Manual. Revision 8-7-2012. Picarro, Inc. 3105 Patrick Henry Dr. Santa Clara California, 95054 USA
- Precision Gas Mass Flow Meters Operating Manual. 1/10/2014 Rev. 28. DOC-ALIMAN16. Alicat Scientific. 7641 N Business Park Drive, Tucson, AZ 85743 USA
- Precision Gas Mass Flow Controller Operating Manual. 09/18/2013 Rev. 29. DOC-ALIMAN16C. Alicat Scientific. 7641 N Business Park Drive, Tucson, AZ 85743 USA
- LI-COR2011\_LI-840A CO2/H<sub>2</sub>O gas analyzer instruction manual. Jan 2011. Publication Number 984-10690. LI-COR, Inc. 4421 Superior Street • Lincoln, Nebraska 68504 USA