

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

AOS PROTOCOL AND PROCEDURE: ZOOPLANKTON SAMPLING IN LAKES

PREPARED BY	ORGANIZATION	DATE
Charlotte Roehm	AQU	11/14/2012
Stephanie Parker	AQU	08/04/2014

APPROVALS	ORGANIZATION	APPROVAL DATE
Dave Tazik	SCI	11/12/2014
Mike Stewart	PSE	11/12/2014
Kirsten Ruiz	FOPS	11/13/2014
Charlotte Roehm	AQU	11/13/2014

RELEASED BY	ORGANIZATION	RELEASE DATE
Judy Salazar	CM	11/14/2014

See configuration management system for approval history.

© 2014 NEON Inc. All rights reserved.

The National Ecological Observatory Network is a project solely funded by the National Science Foundation and managed under cooperative agreement by NEON, Inc. Any opinions, findings, and conclusions or recommendations expressed in this material are those of the author(s) and do not necessarily reflect the views of the National Science Foundation.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

Change Record

REVISION	DATE	ECO #	DESCRIPTION OF CHANGE
A	05/28/2014	ECO-01127	Initial release
B	08/29/2014	ECO-02210	Minor updates based on feedback from the field
C	11/14/2014	ECO-02467	Migration to new protocol template

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

TABLE OF CONTENTS

1 OVERVIEW1

1.1 Background 1

1.2 Scope..... 3

1.2.1 NEON Science Requirements and Data Products 3

1.3 Acknowledgments..... 3

2 RELATED DOCUMENTS AND ACRONYMS4

2.1 Applicable Documents 4

2.2 Reference Documents..... 4

2.3 Acronyms 4

2.4 Definitions..... 5

3 METHOD5

4 SAMPLING SCHEDULE7

4.1 Sampling Frequency and Timing 7

4.2 Criteria for Determining Onset and Cessation of Sampling..... 7

4.3 Timing for Laboratory Processing and Analysis 7

4.4 Sampling Timing Contingencies 8

4.5 Sampling-specific Concerns 9

5 SAFETY9

6 PERSONNEL AND EQUIPMENT.....10

6.1 Equipment..... 10

6.2 Training Requirements..... 15

6.3 Specialized Skills..... 15

6.4 Estimated Time 15

7 STANDARD OPERATING PROCEDURES16

SOP A PREPARING FOR SAMPLING.....16

SOP B FIELD SAMPLING17

SOP C DATA ENTRY AND VERIFICATION24

SOP D SAMPLE SHIPMENT25

8 REFERENCES26

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

APPENDIX A	DATASHEETS	27
APPENDIX B	QUICK REFERENCES	28
APPENDIX C	REMINDERS	29
APPENDIX D	ESTIMATED DATES FOR ONSET AND CESSATION OF SAMPLING	30
APPENDIX E	SITE-SPECIFIC INFORMATION	31

LIST OF TABLES AND FIGURES

Table 1.	Contingent decisions.....	8
Table 2.	Equipment list – General equipment.....	10
Table 3.	Equipment list – Secchi depth and Depth Profile equipment.....	12
Table 4.	Equipment list – Sampling equipment.....	13
Table 5.	Equipment list – General boating equipment.....	13
Table 6.	Datasheets associated with this protocol.....	27
Figure 1.	Classes of zooplankton (from Tharp).....	2
Figure 2.	Zones of a lake.	3
Figure 3.	A generic lake site layout with zooplankton sampling locations.....	6
Figure 4.	Example field sheet for zooplankton collection. (Blank sheet in RD[05]).....	18
Figure 5.	Taking a Secchi Disk measurement on the shaded side of the boat.	18
Figure 6.	Zooplankton Tow Net	19
Figure 7.	Tow Volume Calculation	21
Figure 8.	Example of field labels for zooplankton sample bottles.....	21
Figure 9.	Example of a Schindler-Patalas sampler	22

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

1 OVERVIEW

1.1 Background

Zooplankton inhabit all layers of a water body and constitute a major link between primary production and higher trophic levels in aquatic ecosystems. Unlike algae or phytoplankton, zooplankton are microscopic animals that do not produce their own food (Figure 1). These small invertebrates float freely in the water column of lakes and oceans. They are important as both prey and consumers in the aquatic food web. Zooplankton are filter feeders that feed primarily on algae while also being the primary source of food for planktivorous fish. Zooplankton assemblage responds to environmental stressors such as nutrients, and such effects can be detected through changes in species composition, abundance, and body size distribution (U.S. Environmental Protection Agency, 2012).

Many zooplankton are capable of strong swimming movements and may migrate vertically from tens to hundreds of meters; others have limited mobility and depend more on water turbulence to stay afloat. Zooplankton can be classified according both to developmental stages: Meroplankton and holoplankton; and to size (Sanders and Porter, 1990). Meroplankton spend only part of their life cycles as plankton, whilst holoplankton spend essentially their whole existence in the water column. Freshwater zooplankton are dominated by six major groups of animals: protozoa, rotifers, two subclasses of the Crustacea, the cladocerans and copepods and *Mysis* and *Chaoborus* (Figure 1 a-d). The planktonic protozoa in particular, have limited locomotion and are dominated by the meroplanktonic pelagial zooplankton (5 – 300 µm), dominated by a summer planktonic lifecycle, spending the rest of their life cycle in the sediments. Several non-planktonic rotifers (150 µm – 1 mm), are sessile (higher mobility) and mostly associated with the littoral zone (Figure 2). Most rotifers are nonpredatory, and omnivorously feed on bacteria, small algae, and detrital particulate organic matter. The majority of cladoceran are small (0.2 to 3.0 mm) and have a distinct head and bivalve carapace covering the body. Locomotion is accomplished mainly by means of the large secondary antennae. Planktonic copepods (2-4 mm) consist of two major groups, the calanoids (*Diaptomus*) and the cyclopoids, distinguished by their body structure and length of antennae.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

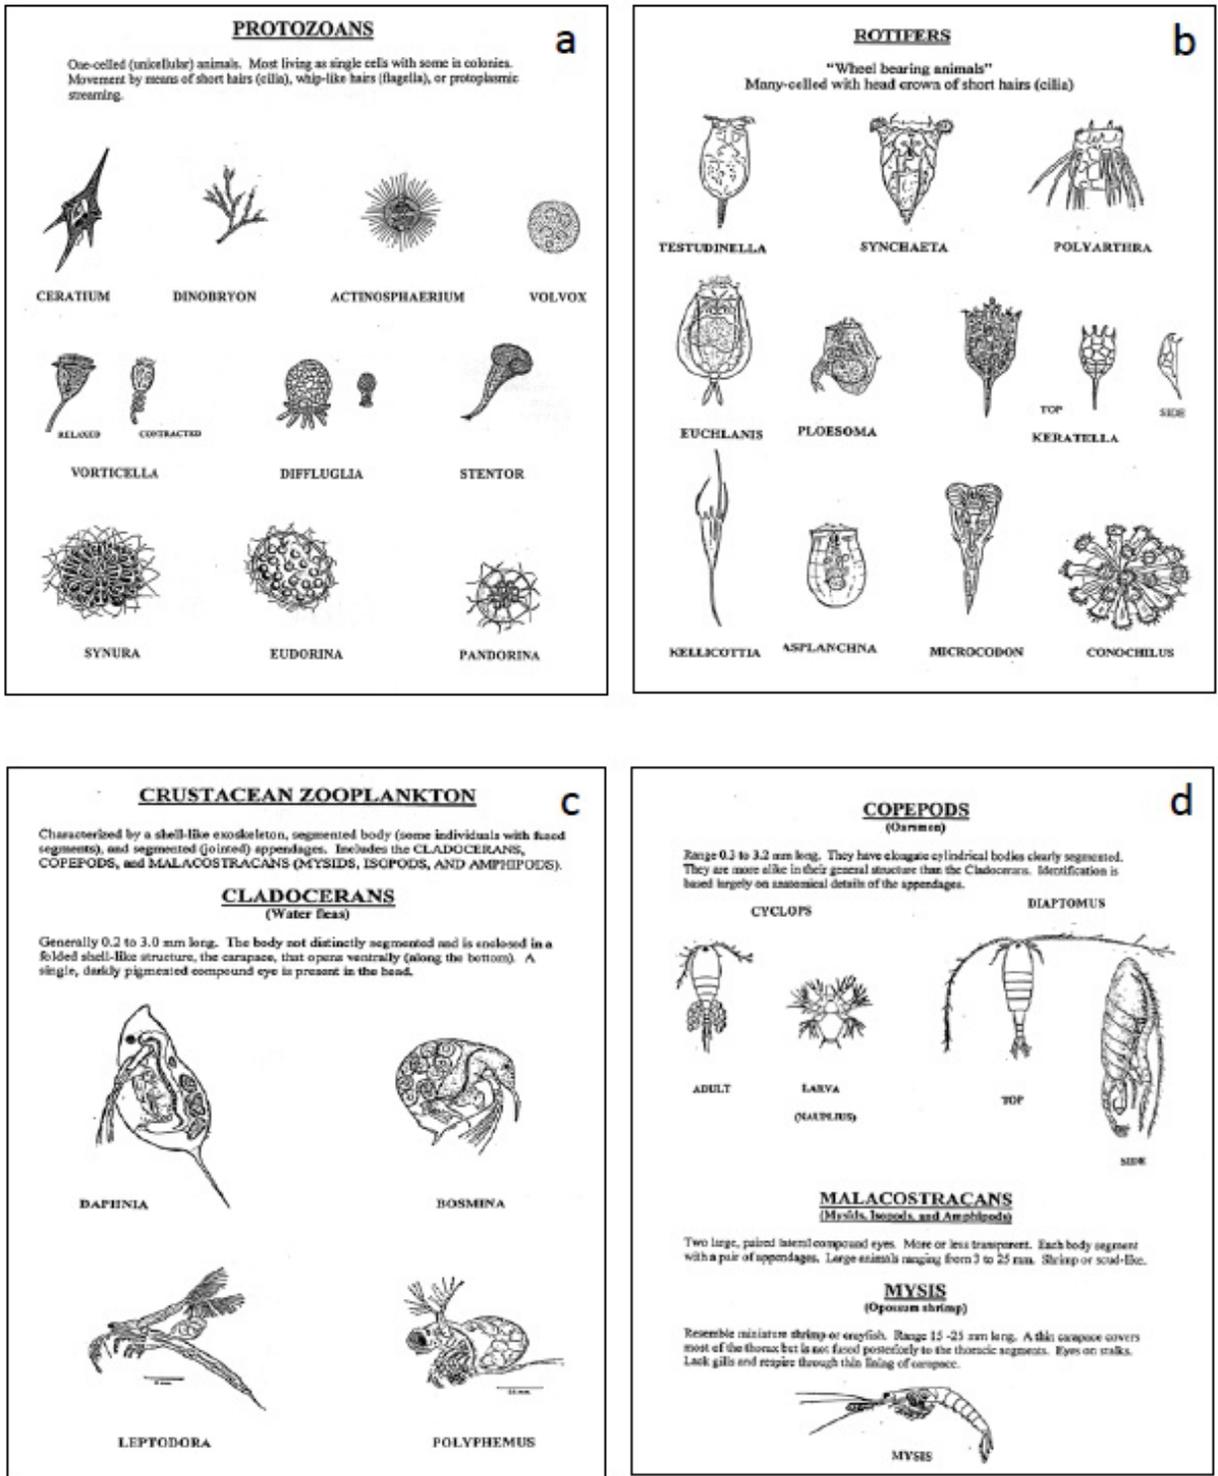


Figure 1. Classes of zooplankton (from Tharp).

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

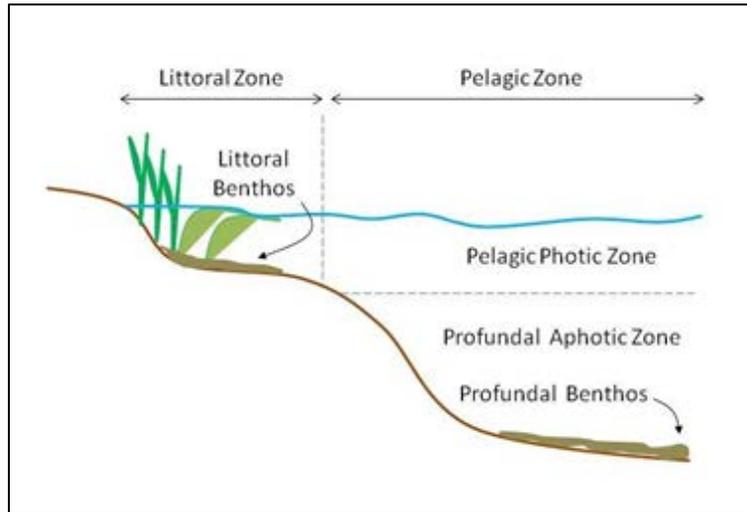


Figure 2. Zones of a lake.

Seasonality plays an important role in zooplankton species presence and abundance, with cyclopoid and calanoid copepods dominating the community in the winter months, with large cladocera peaking in mid-summer and small cladocera in later summer early autumn (Gerten and Adrian, 2002). A change in lake trophic conditions from oligotrophic to eutrophic has been shown to result in size-selective predation that potentially contributes to the decline of larger zooplankton, with ciliated protozoans and rotifers becoming more important (Wetzel, 2001).

1.2 Scope

This document provides a change-controlled version of Observatory protocols and procedures. Documentation of content changes (i.e. changes in particular tasks or safety practices) will occur via this change-controlled document, not through field manuals or training materials.

1.2.1 NEON Science Requirements and Data Products

This protocol fulfills Observatory science requirements that reside in NEON’s Dynamic Object-Oriented Requirements System (DOORS). Copies of approved science requirements have been exported from DOORS and are available in NEON’s document repository, or upon request.

Execution of this protocol procures samples and/or generates raw data satisfying NEON Observatory scientific requirements. These data and samples are used to create NEON data products, and are documented in the NEON Scientific Data Products Catalog (RD[03]).

1.3 Acknowledgments

This protocol is based on modified version of U.S. Environmental Protection Agency (2012a, b), Baker et al. (1997), and U.S. Environmental Protection Agency (2009).

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

2 RELATED DOCUMENTS AND ACRONYMS

2.1 Applicable Documents

Applicable documents contain higher-level information that is implemented in the current document. Examples include designs, plans, or standards.

AD[01]	NEON.DOC.004300	EHS Safety Policy and Program Manual
AD[02]	NEON.DOC.004316	Operations Field Safety and Security Plan
AD[03]	NEON.DOC.000724	Domain Chemical Hygiene Plan and Biosafety Manual
AD[04]	NEON.DOC.001155	NEON Training Plan
AD[05]	NEON.DOC.050005	Field Operations Job Instruction Training Plan
AD[06]	NEON.DOC.014051	Field Audit Plan
AD[07]	NEON.DOC.000824	Data and Data Product Quality Assurance and Control Plan

2.2 Reference Documents

Reference documents contain information that supports or complements the current document. Examples include related protocols, datasheets, or general-information references.

RD[01]	NEON.DOC.000008	NEON Acronym List
RD[02]	NEON.DOC.000243	NEON Glossary of Terms
RD[03]	NEON.DOC.005003	NEON Scientific Data Products Catalog
RD[04]	NEON.DOC.001271	NEON Protocol and Procedure: Manual Data Transcription
RD[05]	NEON.DOC.002302	Datasheets for AOS Protocol and Procedure: Zooplankton Sampling in Lakes
RD[06]	NEON.DOC.001646	General AQU Field Metadata Sheet
RD[07]	NEON.DOC.002191	Datasheets for Secchi Depth and Depth Profile Sampling
RD[08]	NEON.DOC.001152	NEON Aquatic Sample Strategy Document
RD[09]	NEON.DOC.001154	AOS Protocol and Procedure: Aquatic Decontamination
RD[10]	NEON.DOC.001197	AOS Protocol and Procedure: Bathymetry and Morphology of Lakes and Non-Wadeable Streams
RD[11]	NEON.DOC.002494	Datasheets for AOS Sample Shipping Inventory

2.3 Acronyms

Acronym	Definition
DI	Deionized
EMAP	Environmental Monitoring and Assessment Program (USEPA)
mL	milliliter
NLA	National Lakes Assessment (USEPA)
PFD	Personal Flotation Device
USEPA	United States Environmental Protection Agency
USGS	United States Geological Survey

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

2.4 Definitions

Euphotic zone: The upper layer of lake water where sunlight penetrates and photosynthesis can occur. Usually demarcated by the 1% light penetration level.

Eutrophic: The ecosystem having high primary production. In lakes, this often leads to increased production of algae or algal blooms.

Epilimnion: The upper layer of the lake that overlies the thermocline. This layer tends to be less dense with a higher pH and oxygen concentrations.

Hypolimnion: The dense bottom layer of a stratified lake that sits below the thermocline. This layer is denoted by cooler summer temperatures and slightly warmer winter temperatures relative to the Epilimnion.

Metalimnion: The layer of water in a stratified lake that sits between the hypolimnion and the epilimnion. Often equated with the thermocline (Figure 2).

Oligotrophic: The ecosystem response to low nutrient content. In lakes, this often equates to very clear water and little algal production.

Pelagic: The part of the lake that is not near shore or close to the bottom.

Stratified: Indicating the presence of a thermocline.

Thermocline: A distinct layer in a body of water where the change in temperature is more rapid than increasing depth. The denser and cooler layer below the thermocline is defined by the hypolimnion. The warmer upper layer is termed the epilimnion.

3 METHOD

The goals of the Zooplankton Sampling in Lakes Protocol are to quantify biodiversity, number of species present, and biomass (or biovolume) at each lake site. These variables will be used to build a database over time, in order to track changes in zooplankton community structure and function, and introduction of invasive species.

This protocol is based on modified version of U.S. Environmental Protection Agency (2012), Baker et al. (1997), and U.S. Environmental Protection Agency (2009).

Samples shall be collected as an integrated water column sample at the central location of the lake. Two additional samples are taken at the inlet and outlet of the lake or a location downwind of the predominant wind direction. Samples are taken 3 times per year in order to capture multiple species presence and abundance.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

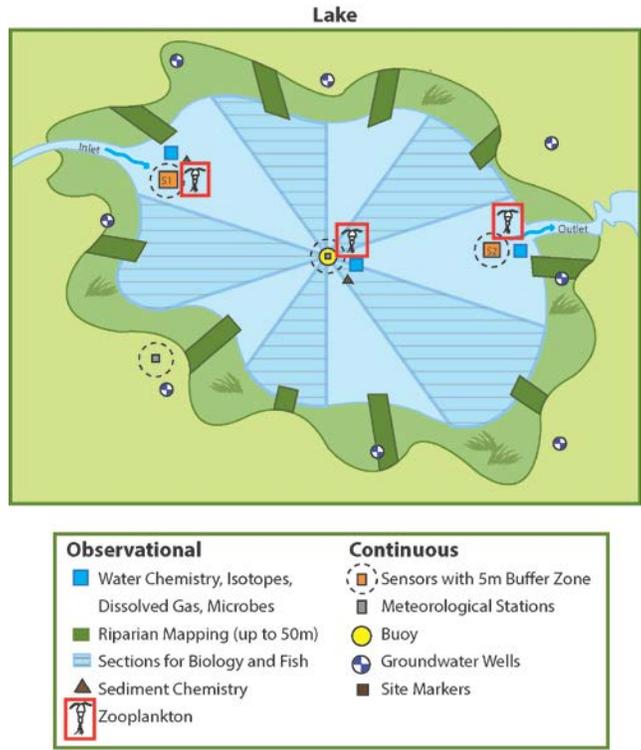


Figure 3. A generic lake site layout with zooplankton sampling locations

Standard Operating Procedures (SOPs), in Section 7 of this document, provide detailed step-by-step directions, contingency plans, sampling tips, and best practices for implementing this sampling procedure. To properly collect and process samples, field technicians **must** follow the protocol and associated SOPs. Use NEON’s problem reporting system to resolve any field issues associated with implementing this protocol.

The value of NEON data hinges on consistent implementation of this protocol across all NEON domains, for the life of the project. It is therefore essential that field personnel carry out this protocol as outlined in this document. In the event that local conditions create uncertainty about carrying out these steps, it is critical that technicians document the problem and enter it in NEON’s problem tracking system.

The procedures described in this protocol will be audited according to the Field Audit Plan (AD[06]). Additional quality assurance will be performed on data collected via these procedures according to the NEON Data and Data Product Quality Assurance and Control Plan (AD[07]).

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

4 SAMPLING SCHEDULE

4.1 Sampling Frequency and Timing

Lake zooplankton sampling occurs three times per year at each site, roughly spring, summer, and autumn. Ranges of sample timing are provided on a site-by-site basis based on metadata collected by the aquatic sensors and field technicians. See the NEON Aquatic Sample Strategy Document (RD[08]) for ranges of sampling dates. Sampling must occur within a 1 month window of the specified sampling date, depending on weather conditions at the site, with a minimum of two weeks between sampling dates.

4.2 Criteria for Determining Onset and Cessation of Sampling

A range of dates for each site will be determined *a priori*, based on historical data including ice on/ice off, the accumulation of degree days, weather, and riparian phenology

4.3 Timing for Laboratory Processing and Analysis

Though samples should ideally be shipped to external processing facilities within one week of collection, they may be held for up to 30 days at the domain support facility if necessary.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

4.4 Sampling Timing Contingencies

All samples from one sampling bout must be collected within one day (i.e., all samples per lake/non-wadeable stream as detailed in this protocol). A minimum of 2 weeks between sample periods shall be observed.

Table 1. Contingent decisions

Delay/ Situation	Action	Outcome for Data Products
Hours	If circumstances occur that impede sampling (e.g., wildlife, weather), start sampling again the next day that conditions permit.	None as long as samples are collected within the pre-determined sampling window. If waiting for favorable conditions causes sampling to occur outside of the sampling window, data must be flagged.
	If circumstances occur that delay sampling (e.g., lightning), but sampling can be continued the same day while still meeting the weather requirements below, continue to collect samples.	None as long as samples are collected within the pre-determined sampling window. If waiting for favorable conditions causes sampling to occur outside of the sampling window, data must be flagged.
	If weather conditions deteriorate and the lake/non-wadeable stream becomes too windy (>9 km hr ⁻¹) to hold the boat stationary over a sampling point, return to shore and wait in a safe location for 30 minutes. If wind subsides, resume sampling, if not, return to the Domain Support Facility and sample at another time.	None as long as samples are collected within the pre-determined sampling window. If waiting for favorable conditions causes sampling to occur outside of the sampling window, data must be flagged.
	If you are able to return to the lake/non-wadeable stream to sample within 24 hours, you may keep samples from the previous day. If you are not able to return within 24 hours, discard any previously collected samples in the lake/non-wadeable stream or at the Domain Support Facility and start over.	None as long as samples are collected within the pre-determined sampling window. If waiting for favorable conditions causes sampling to occur outside of the sampling window, data must be flagged.
5 or More Days	Samples shall be taken a minimum of 5 days following a major flow event (>25% change in flow within 15 minutes and/or turbidity levels are double the monthly average), allowing for recolonization before sampling occurs.	None as long as samples are collected within the pre-determined sampling window. If waiting for favorable conditions causes sampling to occur outside of the sampling window, data must be flagged.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

4.5 Sampling-specific Concerns

- Zooplankton often become trapped in the folds of the nets (near the stitching). Check net seams between samples to ensure that specimens are added to the correct samples, and do not remain in the net between sites.
- Samples must be preserved within 30 minutes in the field.

5 SAFETY

This document identifies procedure-specific safety hazards and associated safety requirements. It does not describe general safety practices or site-specific safety practices.

Personnel working at a NEON site must be compliant with safe field work practices as outlined in the Operations Field Safety and Security Plan (AD[02]) and EHS Safety Policy and Program Manual (AD[01]). Additional safety issues associated with this field procedure are outlined below. The Field Operations Manager and the Lead Field Technician have primary authority to stop work activities based on unsafe field conditions; however, all employees have the responsibility and right to stop their work in unsafe conditions.

See Section 10 in the NEON Operations Field Safety and Security Plan (AD [01]) for aquatic-specific field safety requirements. In addition, the following safety requirement must be followed:

1. Due to site-specific hazards that may be encountered, technicians may conduct sampling from the boat, without dismounting from the vessel. In addition, technicians are required to use extra caution in waters where alligators are present and to make sure a safe distance from hazards is maintained.
2. All personnel must be wearing a personal flotation device (PFD) prior to entering the boat.
3. All employees shall have access to a form of communication with other team members such as a two-way radio.
4. Technicians should be aware of any site-specific hazards and to the waters of that particular location (i.e. current status, tidal charts, etc.).

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

6 PERSONNEL AND EQUIPMENT

6.1 Equipment

The following equipment is needed to implement the procedures in this document. Equipment lists are organized by task. They do not include standard field and laboratory supplies such as charging stations, first aid kits, drying ovens, ultra-low refrigerators, etc.

Table 2. Equipment list – General equipment

Item No.	R/S	Description	Purpose	Quantity	Special Handling
Durable items					
	R	Site-specific Bathymetry Map (RD[10])	Determining sampling locations	1	N
	R	Work gloves	Used with the samplers for safe handling of the rope	1 pair	N
	R	Calculator	Calculating sample volume	1	N
	R	Cooler with ice packs	Keeping samples cool	1	N
Consumable items					
	R	Aquatic Field Metadata Sheet, RD[06] (all-weather paper)	Recording metadata	1	N
	R	Field data sheets (all-weather paper, RD[05])	Recording data	2	N

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

Item No.	R/S	Description	Purpose	Quantity	Special Handling
	R	Pre-printed adhesive labels	Labeling samples	1 sheet	N
	R	Laboratory nitrile gloves	Preventing preservative contact with skin	3 pair	N
	R	Pencils	Recording data	4	N
	R	Permanent markers	Labeling samples	4	N
	R	Tape (roll)	Taping sample bottles lids shut	1	N

R/S=Required/Suggested

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

Table 3. Equipment list – Secchi depth and Depth Profile equipment

Item No.	R/S	Description	Purpose	Quantity	Special Handling
Durable items					
MX100453	R	GPS and Sounder Unit (Humminbird)	Navigating to sampling locations	1	N
MX100447	R	Secchi disk	Determining the depth of the euphotic zone	1	N
MX100450	R	Secchi disk weighted rope	Determining the depth of the euphotic zone	1	N
MX100514	R	Multisonde for temperature and depth	Measuring water temperature for temperature profile	1	N
Consumable items					
	R	Sounder Battery	Powering the Sounder Unit (Humminbird)	1	Y

R/S=Required/Suggested

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

Table 4. Equipment list – Sampling equipment

Item No.	R/S	Description	Purpose	Conditions Used	Quantity	Special Handling
Durable items						
MX100397	R	Plankton tow net, 12" mouth, 63 µm mesh	Collecting samples	Water depth is > 2	1	N
	R	Nylon safety line (10-50 m)	Used with tow net	Water depth is > 2	1	N
MX105580	R	Schindler-Patalas sampler, 12 L, 63 µm mesh size	Collecting samples	Water depth is < 2	1	N
	R	500 mL Wash bottle	Rinsing the sides of the sampler net	All	1	N
	S	Plastic sampling tray	Removing debris from the sample	All	1	N
	S	Forceps	Removing debris from the sample	All	1	N
Consumable items						
	R	500 mL Nalgene sample bottles	Sample container	All	6	N
	R	70% Ethanol	Preservative	All	1	Y
	R	Resealable bags (gallon)	Container for sample bottles	All	3	N

R/S=Required/Suggested

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

Table 5. Equipment list – General boating equipment

Item No.	R/S	Description	Purpose	Quantity	Special Handling
Durable items					
	R	Boat		1	Y
	R	Anchor with rope		1	N
	R	Oars		2	N
	R	Trolling Electric Motor		1	Y
	R	Battery (12 volt)		1	Y
	R	Safety kit for boat (e.g., flares, bailer, float with rope)		1	Y
	R	First Aid Kit		1	N
	R	Personal Flotation Devices (PFDs)		1 per person	N
Consumable items					
		(None)			

R/S=Required/Suggested

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

6.2 Training Requirements

All technicians must complete required safety training as defined in the NEON Training Plan (AD[04]). Additionally, technicians must complete protocol-specific training for safety and implementation of this protocol as required in Field Operations Job Instruction Training Plan (AD[05]).

All personnel required to operate a boat shall be trained through an approved program. All others shall be aware of boating safety procedures.

Personnel will be trained in the field protocols associated with this document, and trained in safe working practices for lake- and river-based field work.

6.3 Specialized Skills

Where applicable, personnel will be licensed to operate a boat and able to safely handle a motor and drive a boat safely.

6.4 Estimated Time

The time required to implement a protocol will vary depending on a number of factors, such as skill level, system diversity, environmental conditions, and distance between sample plots. The timeframe provided below is an estimate based on completion of a task by a skilled two-person team (i.e., not the time it takes at the beginning of the field season). Use this estimate as framework for assessing progress. If a task is taking significantly longer than the estimated time, a problem ticket should be submitted.

Field sampling requires two technicians for four hours each sampling day plus travel to and from the site.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

7 STANDARD OPERATING PROCEDURES

SOP A Preparing for Sampling

1. Collect and prepare all equipment, including sample bottles and labels.
 - a. Load GPS sampling coordinates in GPS.
2. Pre-print adhesive labels for sample bottles and data sheets on all-weather paper.
3. Check for holes in nets, assure that nets are clean and free of debris and organic matter and have been decontaminated (RD[09]) since last use.
4. Have ice or ice packs frozen and ready for cooler.
5. Check that all equipment is in good condition and all batteries are charged.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

SOP B Field Sampling

B.1 Locating Sampling Locations

1. In the deepest point in the lake, determined by site map and pre-loaded GPS coordinates, 2 integrated samples.
 - a. Location ID = “center”
2. Near the major inlet in the littoral zone, 2 integrated samples.
 - a. Location ID = “inlet”
3. Near the outlet in the littoral zone, 2 integrated samples.
 - a. Location ID = “outlet”

B.2 Collecting Samples

1. Ensure the General AQU Field Metadata Sheet (RD[06]) is completed.
2. Navigate the boat to the central sampling location as defined by bathymetric maps of the lake (RD[10]).
3. Fill in the location information on the field sheet (RD[05]) and note the GPS position of the sampling location.
4. Gently lower the anchor to the bottom of the lake so as not to suspend sediments.
5. Always sample near the bow of the boat to minimize the effects of the motor on the water column. When anchored, the bow of the boat tends to orient itself with the bow into the wind or current.
6. Determine the total water depth from the sonar readings.
7. Determine the depth of the thermocline (if present) at the sampling location using the multisonde. Record the depth and water temperature every 0.5 m on the Depth profile field data sheet (RD[07]).



Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

NEON Zooplankton Collection					
Lakes					
Site (4-letter code): _____			Recorded by: _____		
Date (YYYYMMDD): _____			Collected by: _____		
Local time (HH:MM): _____			Sampling protocol & Rev.: _____		
Sampling locations					
Location ID	Latitude			Longitude	
Location ID	Sample type	Replicate	Sample ID	Sample depth (m)	Number of tows

Figure 4. Example field sheet for zooplankton collection. (Blank sheet in RD[05]).

8. Determine the depth of the euphotic zone (depth to which 1% light penetrates) using the Secchi disk (Figure 5, RD[07]).
 - a. Take the Secchi reading from the shady side of the boat. If there is no shade use a hand or any object that can produce enough shade to cut down the sun glare. **DO NOT WEAR SUNGLASSES WHEN UNDERTAKING THIS MEASUREMENT.**
 - b. Lower the Secchi disk slowly until the white quadrants disappear, and determine the depth to the nearest tenth of a meter.
 - c. Lower the Secchi disk so it is about 0.5 m below the first reading. Slowly pull the disk up until it reappears, and determine this depth to the nearest tenth of a meter.
 - d. Average the two depths to get the Secchi depth. Record all readings on the data sheet.
 - e. Repeat at each sampling location.



Figure 5. Taking a Secchi Disk measurement on the shaded side of the boat.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

9. Determine which zooplankton sampler to use.
 - a. If water depth is < 2 meters use a Schindler-Patalas sampler.
 - 1) If <2 but > 1 m take samples at 0.5 m and 1.5 m depths and integrate.
 - 2) < 1 m take 2 samples from 0.5 m.
 - b. If water is > 2 meters use a plankton tow net sampler to take an integrated sample.
 - c. Note the sample type field data sheet (RD[05]).
10. If using a tow net (Figure 6).
 - a. Attach the net to a nylon rope marked at 0.5 m intervals.
 - b. Lower the net to where the bottom tubing is 0.5 m above the bottom of the lake. If conditions are windy or conditions necessitate, add a small weight at the bottom of the net to help lower the netting.
 - c. Pull the nylon rope vertically at a rate of 0.5 m/s (net tow).
 - d. Inspect the sample for organic and inorganic debris (leaves, sediments etc.). If excessive debris is noted, discard sample and start again.
 - e. If algae clogs the net, rinse the sides of the net down with the 500 mL wash bottle. If water cannot escape from the net, consider using the Schindler-Patalas sampler at this location.
 - f. After the inspection, slowly lower the net into the lake to within inches of the net opening above the water surface and abruptly pull upwards out of the water to collect the contents within the net into the collection cup. *Take care not to submerge the top of the net opening below the water surface.* Repeat several times until the net is fully rinsed.



Figure 6. Zooplankton Tow Net

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

- g. Complete the rinsing of the net contents by spraying water against the outside of the net with a wash bottle filled with lake water.
- h. Holding the net in a vertical position, carefully open the spigot on the hose and pour into the 500 mL sample bottle.
 - 1) If debris is present either discard the whole sample (i.e. lots of particulate debris) or pour the sample into the plastic tray and remove the large debris with forceps.
- i. Rinse the concentrated zooplankton into the collection bottle using a squirt bottle filled with lake water.
- j. The total sample in the bottle should be 1/3 full with zooplankton and water.
- k. Note the tow depth (distance in meters of water column through which the collecting unit was retrieved) on the field data sheet (Figure 7, RD[05]) so sample volume can be calculated.
- l. Rinse the net, bottle and retrieval rope thoroughly (2 to 3 times) with water from the site.
- m. Repeat tows (Steps b-l) until the sample bottle is $\frac{3}{4}$ full (allow enough space for 40 mL of preservative).
- n. In shallow lakes, multiple tows with each net are required to achieve the cumulative tow length representative of the water column.
- o. Note the number of tows on the data sheet (RD[05]) in order to calculate total sample volume)
- p. Preserve according to Sample Preservation (Section B.3) and place sample bottle in cooler.
- q. Proceed to the next sample location, and rinse the net, collection cup and retrieval rope thoroughly (2 to 3 times) with water from the site on the downwind side of the sampling location and repeat above steps.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

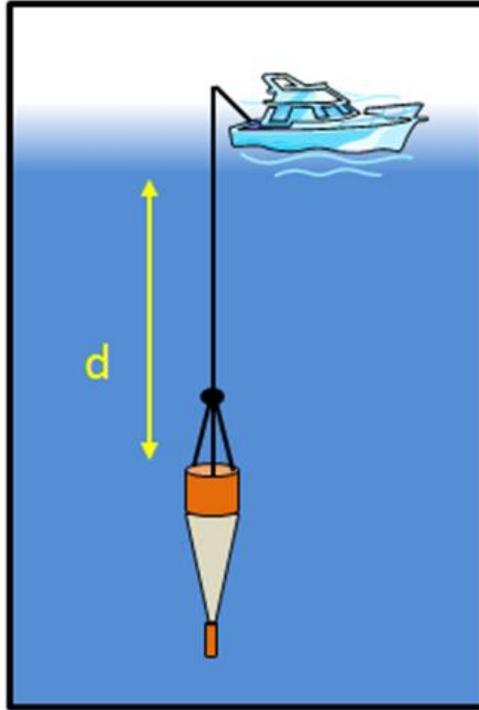


Figure 7. Tow Volume Calculation

 <small>National Ecological Observatory Network, Inc.</small>	Sample type: <u>tow net</u>
	Schindler-Patalas
	Site: <u>BARC</u>
	Collected by: <u>sparker</u>
	Location: <u>center</u>
Date: <u>20140702</u>	Depth (m): <u>2.4</u>
	Number of tows: <u>3</u>
Sample ID: <u>BARC.20140702.tow.1</u>	

 <small>National Ecological Observatory Network, Inc.</small>	Sample type: tow net
	<u>Schindler-Patalas</u>
	Site: <u>BARC</u>
	Collected by: <u>sparker</u>
	Location: <u>inlet</u>
Date: <u>20140702</u>	Depth (m): <u>1.0</u>
	Number of tows: <u>2</u>
Sample ID: <u>BARC.20140702.schindler.2</u>	

Figure 8. Example of field labels for zooplankton sample bottles.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

11. If a Schindler-Patalas sampler is used (Figure 9):

- a. Ensure the dolphin bucket is attached.
- b. Lower sampler to appropriate depth.
- c. When the depth is reached the trap doors will close automatically.
- d. Bring the sampler to the surface. The water will drain through the net.
 - 1) When filled with water, this sampler is heavy. Work gloves may be worn to protect hands.
- e. Rinse the sampler and net with the 500 mL wash bottle filled with lake water until all samples is inside the dolphin bucket.
- f. Carefully remove the dolphin bucket and transfer sample to a 500 mL sample bottle. Rinse dolphin bucket into collection bottle.
- g. Repeat steps above to integrate two Schindler-Patalas samplers.
- h. Preserve according to Sample Preservation (Section B.3) and place sample bottle in cooler.
- i. Proceed to next sampling location and repeat steps above.



Figure 9. Example of a Schindler-Patalas sampler

B.3 Preserving Samples



All processing must be completed in the field. Should conditions not allow for this step to be undertaken in the field within 5 minutes of sampling, all preservatives shall be added within 30 minutes of collecting the sample in the field and noted in the comments section.

1. Put on Nitrile gloves
2. Add 40 mL of 70% ethanol (or dilute 95% ETOH) solution to the sample within 5 minutes of collection (final concentration ~30-40% ETOH).
3. Carefully re-cap bottle, ensuring that no sample escapes and gently invert bottle to mix.
4. Store in a cooler to return to Domain Support Facility.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

B.4 Ending the Processing Day

1. Refreshing the sampling kit
 - a. Replace sample bottles.
 - b. Print new field labels and field data sheets.
 - c. Refill/restock preservative containers.
2. Equipment maintenance, cleaning and storage
 - a. Decontaminate all equipment that has come in contact with lake/non-wadeable stream water according to the NEON Aquatic Decontamination Protocol (RD 08)].
 - b. Dry all equipment thoroughly before storage.
 - c. Check all nets for holes and patch if necessary.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

SOP C Data Entry and Verification

As a best practice, field data collected on paper datasheets should be digitally transcribed within 7 days of collection or the end of a sampling bout (where applicable). However, given logistical constraints, the maximum timeline for entering data is within 14 days of collection or the end of a sampling bout (where applicable). See RD[04] for complete instructions regarding manual data transcription.

Enter all data from the Lab Data Sheets into Excel workbooks “lake_zooplankton data entry”.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

SOP D Sample Shipment

Information included in this SOP conveys science-based packaging, shipping, and handling requirements, not lab-specific or logistical demands. For that information, reference the [CLA shipping document](#) on [CLA’s NEON intranet site](#).

D.1 Handling Hazardous Material

Follow shipping and Haz-mat procedures for ethanol.

D.2 Supplies/Containers

1. Tape bottle lids.
2. Place package inside appropriate sturdy shipping container. Add absorbent packing material as necessary to take up excess space in container.

D.3 Timelines

Shipping should occur within one week of sampling, however samples may be held for up to 30 days at the domain support facility if necessary.

D.4 Conditions

Samples may be stored at the domain support facility at 4 °C until shipping. Ship samples at ambient temperature.

D.5 Grouping/Splitting Samples

Group samples by site per bout.

D.6 Return of Materials or Containers

Include return shipping label if any shipping materials that need to be returned to the domain support facility (e.g., cooler).

D.7 Shipping Inventory

Include sample shipment inventory (RD[11]). Email shipping inventory to external lab contact and copy the NEON CLA contact.

D.8 Laboratory Contact Information and Shipping/Receipt Days

Ship to zooplankton taxonomy lab. See the [CLA shipping document](#) on [CLA’s NEON intranet site](#).

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

8 REFERENCES

- Baker, J.R., D.V. Peck, and D.W. Sutton (Eds.) 1997. Environmental Monitoring and Assessment Program Surface Waters: Field Operations Manual for Lakes. EPA/620/R-97/001. U.S. Environmental Protection Agency, Washington, D.C.
- Gerten, D. and Adrian, R. 2002. Species-specific changes in the phenology and peak abundance of freshwater copepods in response to warm summers. *Freshwater Biology* 47, 2163–2173.
- Sanders, R.W. and K.G. Porter. 1990. Bacterivorous flagellates as food resources for the freshwater crustacean zooplankter *Daphnia ambigua*. *Limnol. Oceanogr.* 35: 188-191.
- Tharp, R. <http://gvsu.edu/wri/education/instructor-s-manual-appendix-d-44.htm>.
- U.S. Environmental Protection Agency. 2005. Standard Operating Procedure for Zooplankton, Revision 10, (http://www.epa.gov/glnpo/monitoring/sop/chapter_4/LG402.pdf).
- U.S. Environmental Protection Agency Minnesota. 2009. National Lake Assessment (NLA) protocol. National Lakes Assessment: a collaborative survey of the Nation's lakes. EPA 841/R-09/001, U.S. Environmental Protection Agency, Office of Water and Office of Research and Development, Washington, D.C.
- U.S. Environmental Protection Agency. 2012a. National Lakes Assessment Program, Field Operations Manual.
- U.S. Environmental Protection Agency. 2012b. Sampling Procedures for the Great Lakes.
- Wetzel R G. Limnology. Philadelphia: Saunders, 2001.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

APPENDIX A DATASHEETS

The following datasheets are associated with this protocol:

Table 6. Datasheets associated with this protocol

NEON Doc. #	Title
NEON.DOC. 002302	Datasheets for AOS Protocol and Procedure: Zooplankton Sampling in Lakes
NEON.DOC.001646	General AQU Field Metadata Sheet
NEON.DOC.002191	Datasheets for Secchi Depth and Depth Profile Sampling


These datasheets can be found in Agile or the NEON Document Warehouse.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

APPENDIX B QUICK REFERENCES

Step 1 – Check the zooplankton field sampling kit to make sure all supplies are packed.

Step 2 – Prepare labels (2" * 4").

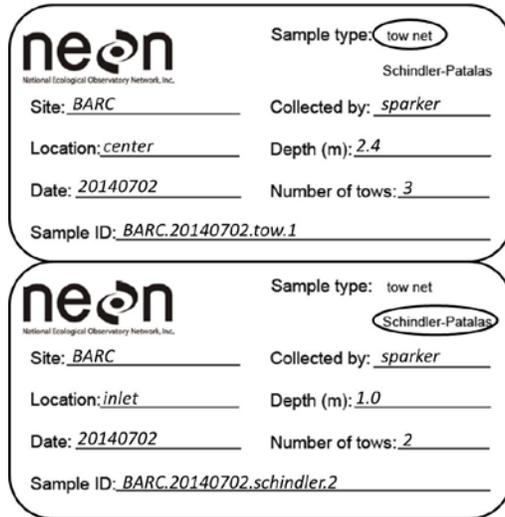

Step 3 – Ensure the General AQU Field Metadata Sheet (RD[06]) is completed per field site visit.

Step 4 – Determine water depth, depth of the thermocline (depth profile), and depth of the euphotic zone (Secchi disk).

Step 5 – Determine which sampler to use based on water depth.

1. If water depth is < 2 meters use a Schindler-Patalas sampler.
 - a. If <2 but > 1 m take samples at 0.5 m and 1.5 m depths and integrate.
 - b. < 1 m take 2 samples from 0.5 m.
2. If water is > 2 meters use a plankton tow net sampler to take an integrated sample.

Step 6 – Collect 2 integrated samples at:

1. In the deepest point in the lake, determined by site map and pre-loaded GPS coordinates
 - a. Location ID = "center"
2. Near the major inlet in the littoral zone
 - a. Location ID = "inlet"
3. Near the outlet in the littoral zone
 - a. Location ID = "oulet"

Step 7 – Preserve samples in the field with ethanol.

Step 8 – Ship samples to zooplankton taxonomy lab.

Title: AOS Protocol and Procedure: Zooplankton Sampling in Lakes		Date: 11/14/2014
NEON Doc. #: NEON.DOC.001194	Author: S. Parker	Revision: C

APPENDIX C REMINDERS

Before heading into the field: Make sure you...

- Collect and prepare all equipment including labels.
- Pre-print labels on waterproof paper.
- Check for holes in nets, assure that nets are clean and free of debris and organic matter and have been decontaminated (RD[09]) since last use.
- Check that all equipment is in good condition and all batteries are charged.

Sample collection: Be sure to...

- Determine water depth, depth of the thermocline, and depth of the euphotic zone.
- Do not wear sunglasses when taking the Secchi depth measurement.
- Choose the appropriate sampler.
- Always sample near the bow of the boat to minimize the effects of the motor on the water column. When anchored, the bow of the boat tends to orient itself with the bow into the wind or current.
- Take care not to submerge the top of the net opening below the water surface.

Sample processing: Be sure to...

- Complete sample processing in the field.
- Should conditions not allow for this step to be undertaken in the field within 5 minutes of sampling, all preservatives shall be added within 30 minutes of collecting the sample in the field and noted in the comments section.

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

APPENDIX D ESTIMATED DATES FOR ONSET AND CESSATION OF SAMPLING

See the Site Specific Sampling Strategy Document on [AQU's NEON intranet site](#).

<i>Title:</i> AOS Protocol and Procedure: Zooplankton Sampling in Lakes		<i>Date:</i> 11/14/2014
<i>NEON Doc. #:</i> NEON.DOC.001194	<i>Author:</i> S. Parker	<i>Revision:</i> C

APPENDIX E SITE-SPECIFIC INFORMATION

See the Site Specific Sampling Strategy Document on [AQU's NEON intranet site](#).